

Manufacturer	Model	System	Ecu name	Ecu name	Feature	Feature ID
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"1"	Iveco identification code
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"2"	Bosch identification code
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"3"	ECU software number
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"4"	ECU software version
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"5"	Serial number
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"6"	Alphacode
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	ECU Information	"7"	VIN code
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	Live Parameters	"1"	Wheel speed, left front
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	Live Parameters	"2"	Wheel speed, right front
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	Live Parameters	"3"	Wheel speed, left rear
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	Live Parameters	"4"	Wheel speed, right rear
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	Live Parameters	"5"	Supply voltage
Iveco	Daily III	Brake System	ABS 8/ASR 8/ESP 8 Bosch	Live Parameters	"6"	Ignition Counter
Iveco	Daily III	Brake System	Bosch 5.3	ECU Information	"1"	Hardware version
Iveco	Daily III	Brake System	Bosch 5.3	Live Parameters	"1"	Wheel speed, left front
Iveco	Daily III	Brake System	Bosch 5.3	Live Parameters	"2"	Wheel speed, right front
Iveco	Daily III	Brake System	Bosch 5.3	Live Parameters	"3"	Wheel speed, left rear
Iveco	Daily III	Brake System	Bosch 5.3	Live Parameters	"4"	Wheel speed, right rear
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"1"	Engine speed
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"2"	Advance injection
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"3"	Intake air quantity
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"4"	Accelerator pedal position
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"5"	Accelerator pedal unit potentiometer 1, voltage supply
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"6"	Accelerator pedal unit potentiometer 2, voltage supply
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"7"	Boost air temperature
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"8"	Coolant temperature
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"9"	Fuel temperature sensor
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"10"	Battery voltage
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"11"	Vehicle speed
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"12"	Fuel pressure setpoint (rail pressure)
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"13"	Fuel pressure
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"14"	Desired injector quantity Pilot 1
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"15"	Setup quantity for main injection
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"16"	Current injection quantity
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"17"	Cylinder balancing, cylinder 1
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"18"	Cylinder balancing, cylinder 2
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"19"	Cylinder balancing, cylinder 3
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"20"	Cylinder balancing, cylinder 4
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"21"	Target boost pressure (with VGT)
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"22"	Boost pressure sensor (without EGR)
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Live Parameters	"23"	Ambient pressure
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"1"	Diagnostic warning lamp
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"2"	Preheating light
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"3"	Fuel pump relay
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"4"	AC compressor relay
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"5"	Diesel filter heater relay
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"6"	Glowplug relay
Iveco	Daily III	Engine Diesel	2.3 EDC16P3	Tests	"7"	Cooling fan relay
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"1"	Battery voltage
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"2"	Accelerator pedal position
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"3"	Accelerator pedal position sensor voltage
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"4"	Boost air temperature
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"5"	Coolant temperature
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"6"	Fuel temperature sensor
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"7"	Vehicle speed
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"8"	Fuel pressure
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"9"	Fuel pressure setpoint (rail pressure)
Iveco	Daily III	Engine Diesel	2.8 MS63	Live Parameters	"10"	Pwm-output for high pressure pump

"Iveco"	"Daily III"	"Engine Diesel"	"2.8 MS63"	"Live Parameters"	"11"	"Boost pressure"
"Iveco"	"Daily III"	"Engine Diesel"	"2.8 MS63"	"Live Parameters"	"12"	"Ambient pressure"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"1"	"Input shaft speed"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"2"	"Transmission output speed"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"3"	"Vehicle speed"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"4"	"ECU temperature"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"5"	"Operating time Ecu"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"6"	"Internal voltage supply microcontroller (Reference value 0,75 V batt)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"7"	"UKL30 battery voltage pin 4-5"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"8"	"Supply voltage (+15)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"9"	"Plus for control motor of clutch actuator"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"10"	"Minus for control motor of clutch actuator"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"11"	"Battery voltage for clutch actuator sensors"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"12"	"Plus for control motor of the gearbox actuator (Shift)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"13"	"Minus for control motor of the gearbox actuator (Shift)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"14"	"Plus for control motor of the gearbox actuator (Select)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"15"	"Minus for control motor of the gearbox actuator (Select)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"16"	"Gearbox actuator voltage supply"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"17"	"Battery voltage"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"18"	"Accelerator pedal position"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"19"	"Wheel speed, left front"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"20"	"Wheel speed, right front"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"21"	"Wheel speed, left rear"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"22"	"Wheel speed, right rear"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"23"	"Engine torque reference value"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"24"	"Engine torque requested by driver"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"25"	"Engine torque requested by driver"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"26"	"Engine torque"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"27"	"Engine torque"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"28"	"Engine friction torque"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"29"	"Engine friction torque"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"30"	"Engine crankshaft torque"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"31"	"Engine crankshaft torque"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"32"	"Current at cluth motor"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"33"	"Clutch position"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"34"	"Touchpoint position Eeprom"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"35"	"Absolute clutch stroke (Reference value mm. 27,5 <x< 28,2)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"36"	"Absolute clutch stroke touch-point (Reference value mm. 12<x< 18)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"37"	"Current at Select motor"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"38"	"Select position"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"39"	"Current at shift motor"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"40"	"Shift position"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"41"	"Relative position of gate 1 to 5/6 (Reference value 65-67 %)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"42"	"Relative position of gate 3 to 5/6 (Reference value 32-34 %)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"43"	"Select position of forward gear 1 (Ref. value mm -1-+1)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"44"	"Shift position of forward gear 1 (Ref. value mm 11-15)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"45"	"Select position of forward gear 2 (Ref. value mm -1-+1)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"46"	"Select position of forward gear 3 (Ref. value mm 3,5-5,5)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"47"	"Shift position of forward gear 3 (Ref. value mm 11-15)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"48"	"Select position of forward gear 4 (Ref. value mm 3,5-5,5)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"49"	"Select position of forward gear 5 (Ref. value mm 7,5-9,5)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"50"	"Shift position of forward gear 5 (Ref. value mm 11-15)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"51"	"Select position of forward gear 6 (Ref. value mm 7,5-9,5)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"52"	"Select position of reverse gear (Ref. value mm -5--3)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"53"	"Shift position of reverse gear (Ref. value mm 11-15)"
"Iveco"	"Daily III"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"54"	"Distance of neutral to reverse-gear"
"Iveco"	"Daily III"	"Immobiliser"	"Immobilizer"	"ECU Information"	"1"	"Hardware version"
"Iveco"	"Daily III"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"1"	"Number of keys stored"
"Iveco"	"Daily III"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"2"	"System time, days"

"Iveco"	"Daily III"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"3"	"System time, hours"
"Iveco"	"Daily III"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"4"	"System time, minutes"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"ECU Information"	"1"	"ISO Code"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"ECU Information"	"2"	"Hardware version"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"ECU Information"	"3"	"Software version number"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"ECU Information"	"4"	"Serial number"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"ECU Information"	"5"	"Number of ECU Fiat drawing"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"1"	"SRS warning lamp"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"2"	"Switch to disable passenger airbag"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"3"	"Passenger airbag exclusion warning lamp"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"4"	"Pretensioner"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"5"	"Side airbag trigger"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"6"	"Passenger airbag"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"7"	"Belt lock, driver"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"8"	"Belt lock, passenger"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"9"	"Connection to ECU container ground"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"10"	"Passenger airbag squib"
"Iveco"	"Daily III"	"Restraints"	"TRW"	"Live Parameters"	"11"	"Driver airbag"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"1"	"ECU hardware number"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"2"	"Hardware version"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"3"	"ECU software number"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"4"	"Software version"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"5"	"Date of production"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"1"	"Coolant temperature"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"2"	"Battery voltage"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"3"	"Fuel pump"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"4"	"Burn air blower"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"5"	"Glow plug"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"6"	"Burner"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"7"	"Co2 digital value"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"1"	"Heater"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"2"	"Dosing pump"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"3"	"Combustion air fan"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"4"	"Auxiliary Heater Coolant Pump"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"5"	"Glow"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"6"	"Starting charge"
"Iveco"	"Daily IV"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"7"	"Vehicle fan activation"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"1"	"Iveco drawing number"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"2"	"ECU hardware number"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"3"	"Hardware version"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"4"	"ECU software number"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"5"	"Software version"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"6"	"Station type (EOL)"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"7"	"Station number (EOL)"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"8"	"Station type (customer service)"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"9"	"Station number (customer service)"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"10"	"Programming date"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"11"	"Pic-number"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"12"	"Vin-number"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"13"	"Van-number"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"ECU Information"	"14"	"Configuration code"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"1"	"Battery voltage"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"2"	"Fuel gauge"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"3"	"Speed from tachometer sensor"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"4"	"Left front door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"5"	"Right front door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"6"	"Right and/or left side door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"7"	"Rear casement door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"8"	"Alarm switch, bonnet"

"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"9"	"Hand brake"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"10"	"Emergency button"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"11"	"Supply voltage subject to (+15) ignition key"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"12"	"Trailer direction lights"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"13"	"Coolant level"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"14"	"Rear windowlift button"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"15"	"Windscreen washer/wiper pump"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"16"	"Brake fluid level"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"17"	"Brake pads"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"18"	"Brake pedal"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"19"	"Components, Stop lights fuse"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"20"	"Reverse gear"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"21"	"Windshield wiper"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"22"	"Bus emergency button"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"23"	"Air suspension"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"24"	"Air filter"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"25"	"Fuel filter"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"26"	"Parking and low beam lights"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"27"	"Parking lights"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"28"	"High beam lights"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"29"	"Spot light button"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"30"	"Foglights"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"31"	"Seatbelt"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"32"	"Retarder"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"33"	"Engine switch off button"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"34"	"Windscreen wiper"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"35"	"Swivel door fault"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"36"	"Emergency handle"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"37"	"Sensor for hand brake totally inserted"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"38"	"Swivel door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"39"	"Alternator signal (D+)"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"40"	"Status of body computer programming - proxi configuration"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"41"	"Enabling of central door locking with blinking"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"42"	"Immobiliser version"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"43"	"Number of keys stored"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"44"	"Number of disabled keys"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"45"	"ID of last key used"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"46"	"Key transponder"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"47"	"Transponder secret code"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"48"	"Transponder ID status"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"49"	"Transponder reading"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"50"	"After last key-on the body computer received the acknowledge from engine ECU"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"51"	"Body computer has received confirmation of correct communication closing from engine ECU"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"52"	"Negative answers received"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"53"	"Status of the minikript codes exchange with the engine ECU"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"54"	"Number of saved remote controls"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"55"	"ID of last remote control used"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"56"	"Status of the locking button when the remote control was last used"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"57"	"Status of the unlocking button, when the remote control was last used"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"58"	"Status of the load compartment button when the remote control was last used"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"59"	"Airbag"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"60"	"Body computer"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"61"	"Dashboard"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"62"	"Transponder ID status"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"63"	"Last alarm identifier"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"64"	"Alarm no. 1 - Alarm cause"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"65"	"Alarm no. 1 - Bonnet"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"66"	"Alarm no. 1 - Trunk"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"67"	"Alarm no. 1 - Automatically enabled alarm"

"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"127"	"Alarm no. 8 - Alarm cause"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"128"	"Alarm no. 8 - Bonnet"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"129"	"Alarm no. 8 - Trunk"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"130"	"Alarm no. 8 - Automatically enabled alarm"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"131"	"Alarm no. 8 - Alarm enabled by remote control"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"132"	"Alarm no. 8 - Front right door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"133"	"Alarm no. 8 - Front left door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"134"	"Alarm 8 - Siren"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"135"	"Alarm no. 8 - Serial line"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"136"	"Alarm no. 9 - Alarm cause"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"137"	"Alarm no. 9 - Bonnet"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"138"	"Alarm no. 9 - Trunk"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"139"	"Alarm no. 9 - Automatically enabled alarm"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"140"	"Alarm no. 9 - Alarm enabled by remote control"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"141"	"Alarm no. 9 - Front right door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"142"	"Alarm no. 9 - Front left door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"143"	"Alarm 9 - Siren"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"144"	"Alarm no. 9 - Serial line"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"145"	"Alarm no. 10 - Alarm cause"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"146"	"Alarm no. 10 - Bonnet"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"147"	"Alarm no. 10 - Trunk"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"148"	"Alarm no. 10 - Automatically enabled alarm"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"149"	"Alarm no. 10 - Alarm enabled by remote control"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"150"	"Alarm no. 10 - Front right door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"151"	"Alarm no. 10 - Front left door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"152"	"Alarm 10 - Siren"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"153"	"Alarm no. 10 - Serial line"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Live Parameters"	"154"	"Number of antitheft device activations"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"1"	"Parking light left"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"2"	"Parking light right"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"3"	"Rear right fog light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"4"	"Rear left fog light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"5"	"Left direction indicator"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"6"	"Right direction indicator"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"7"	"Internal lighting"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"8"	"Lateral dimension light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"9"	"Rear spot light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"10"	"Brake light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"11"	"Numberplate light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"12"	"Courtesy light lateral left swivel door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"13"	"Front middle courtesy light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"14"	"Courtesy light lateral right swivel door"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"15"	"Rear courtesy light"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"16"	"Rear doors status LED"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"17"	"Anti-theft left"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"18"	"Relay for vehicle moving status"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"19"	"Emergency lights led"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"20"	"Rear window LED"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"21"	"Services relay 2, supply for cigar light and unit heater - socket for body assemblers - electric windows buttons - electric windows"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"22"	"High beam relay"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"23"	"Low beam relay"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"24"	"Rear fog lights relay"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"25"	"Buzzer"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"26"	"Siren"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"27"	"Central locking, locking"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"28"	"Central locking, unlocking"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"29"	"Rear window"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"30"	"Pump for front windscreen wiper"
"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"31"	"Front windscreen wiper - slow activation"

"Iveco"	"Daily IV"	"Body Control Module"	"Marelli HPT"	"Tests"	"32"	"Front windscreen wiper - speedy activation"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"1"	"Bosch identification code"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"2"	"Iveco identification code"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"3"	"ECU software number"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"4"	"ECU software version"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"5"	"ECU manufacturing date"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"6"	"Vin-number"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"7"	"Van-number"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"ECU Information"	"8"	"Pic-number"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"1"	"Wheel speed passenger side front"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"2"	"Wheel speed, driver side front"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"3"	"Wheel speed rear passenger side"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"4"	"Wheel speed driver side rear"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"5"	"Supply voltage"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"6"	"Ignition Counter"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"7"	"Stop light switch"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"8"	"Hydraulic pump"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"9"	"Relay activating electrovalves"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"10"	"Retarder output"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"11"	"Front left abs solenoid valve, air inlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"12"	"Front left abs solenoid valve, air outlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"13"	"Front right abs solenoid valve, air inlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"14"	"Front right abs solenoid valve, air outlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"15"	"Abs rear left electrovalves inlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"16"	"Abs rear left electrovalve outlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"17"	"Abs rear right electrovalves inlet"
"Iveco"	"Daily IV"	"Brake System"	"ABS 8/ASR 8/ESP 8 Bosch"	"Live Parameters"	"18"	"Abs rear right electrovalves outlet"
"Iveco"	"Daily IV"	"Brake System"	"Bosch 5.3"	"ECU Information"	"1"	"Hardware version"
"Iveco"	"Daily IV"	"Brake System"	"Bosch 5.3"	"Live Parameters"	"1"	"Wheel speed, left front"
"Iveco"	"Daily IV"	"Brake System"	"Bosch 5.3"	"Live Parameters"	"2"	"Wheel speed, right front"
"Iveco"	"Daily IV"	"Brake System"	"Bosch 5.3"	"Live Parameters"	"3"	"Wheel speed, left rear"
"Iveco"	"Daily IV"	"Brake System"	"Bosch 5.3"	"Live Parameters"	"4"	"Wheel speed, right rear"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Adaptations"	"1"	"Replacing the particle filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Adaptations"	"2"	"Change differential pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Adaptations"	"3"	"Change air mass meter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Adaptations"	"4"	"Change fuel pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Adaptations"	"5"	"Oil change"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"1"	"Speed(crankshaft)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"2"	"Camshaft Engine Speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"3"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"4"	"Accelerator pedal unit potentiometer 1, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"5"	"Accelerator pedal unit potentiometer 2, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"6"	"Advance injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"7"	"Desired injector quantity Pilot 1"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"8"	"Main injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"9"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"10"	"Fuel pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"11"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"12"	"Rail pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"13"	"Fuel temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"14"	"Quantity of fuel"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"15"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"16"	"Input air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"17"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"18"	"Signal boost pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"19"	"Boost air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"20"	"Boost pressure sensor value"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"21"	"Target boost pressure (with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"22"	"Boost pressure"

"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"23"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"24"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"25"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"26"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"27"	"Turbocharger actuator (Version with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"28"	"Air temperature sensor supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"29"	"NOx concentration"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"30"	"Lambda sensor, voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"31"	"Measure resistance lambda heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"32"	"Lambda sensor heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"33"	"Particle quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"34"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"35"	"Pressure difference input/output particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Live Parameters"	"36"	"Check of exhausted gas temperature before catalysator"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"1"	"AC compressor relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"2"	"Diesel filter heater relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"3"	"Pre-heating lamp (Only for vehicles not equipped with multiplex)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"4"	"Glow plug relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"5"	"EOBD lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"6"	"Fuel pump relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"7"	"Diagnostic warning lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 CAN"	"Tests"	"8"	"Cooling fan relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Adaptations"	"1"	"Replacing the particle filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Adaptations"	"2"	"Change differential pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Adaptations"	"3"	"Change air mass meter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Adaptations"	"4"	"Change fuel pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Adaptations"	"5"	"Oil change"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"1"	"Speed(crankshaft)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"2"	"Camshaft Engine Speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"3"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"4"	"Accelerator pedal unit potentiometer 1, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"5"	"Accelerator pedal unit potentiometer 2, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"6"	"Advance injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"7"	"Desired injector quantity Pilot 1"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"8"	"Main injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"9"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"10"	"Fuel pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"11"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"12"	"Rail pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"13"	"Fuel temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"14"	"Quantity of fuel"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"15"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"16"	"Input air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"17"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"18"	"Signal boost pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"19"	"Boost air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"20"	"Boost pressure sensor value"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"21"	"Target boost pressure (with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"22"	"Boost pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"23"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"24"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"25"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"26"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"27"	"Turbocharger actuator (Version with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"28"	"Air temperature sensor supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"29"	"NOx concentration"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"30"	"Lambda sensor, voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"31"	"Measure resistance lambda heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"32"	"Lambda sensor heater"

"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"33"	"Particle quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"34"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"35"	"Pressure difference input/output particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Live Parameters"	"36"	"Check of exhausted gas temperature before catalysator"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"1"	"AC compressor relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"2"	"Diesel filter heater relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"3"	"Pre-heating lamp (Only for vehicles not equipped with multiplex)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"4"	"Glow plug relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"5"	"EOBD lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"6"	"Fuel pump relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"7"	"Diagnostic warning lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC16C39P3 KWP"	"Tests"	"8"	"Cooling fan relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"1"	"Boost pressure sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"2"	"Change air mass meter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"3"	"Change differential pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"4"	"Lambda sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"5"	"Particle filter replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"6"	"Rail pressure control valve replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"7"	"Turbocharger replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"8"	"Rail pressure sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"9"	"Rail pressure sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"10"	"Oil change"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"1"	"Iveco part number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"2"	"ECU serial number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"3"	"ECU software"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"4"	"Supplier ECU software version number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"5"	"Vin-number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"6"	"Van"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"7"	"Pic-number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"8"	"Alphacode EOL"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"9"	"DIS"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"10"	"EOL_table part number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"11"	"IMA/NIMA code"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"12"	"Engine type"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"13"	"Engine serial number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"14"	"Programming date"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"1"	"Engine revolution"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"2"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"3"	"Fuel pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"4"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"5"	"Oil temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"6"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"7"	"Intake air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"8"	"Fuel temperature sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"9"	"Boost air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"10"	"Boost pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"11"	"Boost Pressure Setpoint"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"12"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"13"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"14"	"Turbocharger actuator"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"15"	"EGR position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"16"	"TVA position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"17"	"Setp quant for main injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"18"	"Des inject quant. PII 1"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"19"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"20"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"21"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"22"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"23"	"Temperature before catalytic converter"

"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"24"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"25"	"Actual oxygen concentration"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"26"	"Voltage level at output of lambda sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"27"	"Resistance value lambda heater (if present)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"28"	"Lambda heater temperature (if present)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"29"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"30"	"Advance injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"31"	"Particle quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"32"	"Pressure difference input/output particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"33"	"Exhaust gas flux in the particulate filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"1"	"Relay for air conditioner compressor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"2"	"Relay, heated fuel filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"3"	"Glow plug relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"4"	"EOBD lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"5"	"Fuel pump relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"6"	"Cooling fan relay 1st speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"7"	"Cooling fan relay 2st speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Adaptations"	"1"	"Replacing the particle filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Adaptations"	"2"	"Change differential pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Adaptations"	"3"	"Change air mass meter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Adaptations"	"4"	"Change fuel pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Adaptations"	"5"	"Oil change"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"1"	"Speed(crankshaft)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"2"	"Camshaft Engine Speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"3"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"4"	"Accelerator pedal unit potentiometer 1, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"5"	"Accelerator pedal unit potentiometer 2, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"6"	"Advance injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"7"	"Desired injector quantity Pilot 1"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"8"	"Main injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"9"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"10"	"Fuel pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"11"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"12"	"Rail pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"13"	"Fuel temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"14"	"Quantity of fuel"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"15"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"16"	"Input air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"17"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"18"	"Signal boost pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"19"	"Boost air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"20"	"Boost pressure sensor value"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"21"	"Target boost pressure (with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"22"	"Boost pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"23"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"24"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"25"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"26"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"27"	"Turbocharger actuator (Version with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"28"	"Air temperature sensor supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"29"	"NOx concentration"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"30"	"Lambda sensor, voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"31"	"Measure resistance lambda heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"32"	"Lambda sensor heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"33"	"Particle quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"34"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"35"	"Pressure difference input/output particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Live Parameters"	"36"	"Check of exhausted gas temperature before catalysator"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"1"	"AC compressor relay"

"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"2"	"Diesel filter heater relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"3"	"Pre-heating lamp (Only for vehicles not equipped with multiplex)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"4"	"Glow plug relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"5"	"EOBD lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"6"	"Fuel pump relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"7"	"Diagnostic warning lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 CAN"	"Tests"	"8"	"Cooling fan relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Adaptations"	"1"	"Replacing the particle filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Adaptations"	"2"	"Change differential pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Adaptations"	"3"	"Change air mass meter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Adaptations"	"4"	"Change fuel pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Adaptations"	"5"	"Oil change"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"1"	"Speed(crankshaft)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"2"	"Camshaft Engine Speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"3"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"4"	"Accelerator pedal unit potentiometer 1, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"5"	"Accelerator pedal unit potentiometer 2, voltage supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"6"	"Advance injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"7"	"Desired injector quantity Pilot 1"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"8"	"Main injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"9"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"10"	"Fuel pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"11"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"12"	"Rail pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"13"	"Fuel temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"14"	"Quantity of fuel"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"15"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"16"	"Input air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"17"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"18"	"Signal boost pressure sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"19"	"Boost air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"20"	"Boost pressure sensor value"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"21"	"Target boost pressure (with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"22"	"Boost pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"23"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"24"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"25"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"26"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"27"	"Turbocharger actuator (Version with VGT)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"28"	"Air temperature sensor supply"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"29"	"NOx concentration"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"30"	"Lambda sensor, voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"31"	"Measure resistance lambda heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"32"	"Lambda sensor heater"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"33"	"Particle quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"34"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"35"	"Pressure difference input/output particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Live Parameters"	"36"	"Check of exhausted gas temperature before catalysator"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"1"	"AC compressor relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"2"	"Diesel filter heater relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"3"	"Pre-heating lamp (Only for vehicles not equipped with multiplex)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"4"	"Glow plug relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"5"	"EOBD lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"6"	"Fuel pump relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"7"	"Diagnostic warning lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC16C39P3 KWP"	"Tests"	"8"	"Cooling fan relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"1"	"Boost pressure sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"2"	"Change air mass meter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"3"	"Change differential pressure sensor"

"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"4"	"Lambda sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"5"	"Particle filter replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"6"	"Rail pressure control valve replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"7"	"Turbocharger replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"8"	"Rail pressure sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"9"	"Rail pressure sensor replacement"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"10"	"Oil change"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"1"	"Iveco part number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"2"	"ECU serial number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"3"	"ECU software"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"4"	"Supplier ECU software version number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"5"	"Vin-number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"6"	"Van"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"7"	"Pic-number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"8"	"Alphacode EOL"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"9"	"DIS"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"10"	"EOL_table part number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"11"	"IMA/NIMA code"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"12"	"Engine type"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"13"	"Engine serial number"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"14"	"Programming date"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"1"	"Engine revolution"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"2"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"3"	"Fuel pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"4"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"5"	"Oil temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"6"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"7"	"Intake air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"8"	"Fuel temperature sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"9"	"Boost air temperature"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"10"	"Boost pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"11"	"Boost Pressure Setpoint"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"12"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"13"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"14"	"Turbocharger actuator"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"15"	"EGR position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"16"	"TVA position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"17"	"Setp quant for main injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"18"	"Des inject quant. PII 1"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"19"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"20"	"Current injection quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"21"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"22"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"23"	"Temperature before catalytic converter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"24"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"25"	"Actual oxygen concentration"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"26"	"Voltage level at output of lambda sensor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"27"	"Resistance value lambda heater (if present)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"28"	"Lambda heater temperature (if present)"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"29"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"30"	"Advance injection"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"31"	"Particle quantity"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"32"	"Pressure difference input/output particle trap"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"33"	"Exhaust gas flux in the particulate filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"1"	"Relay for air conditioner compressor"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"2"	"Relay, heated fuel filter"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"3"	"Glow plug relay"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"4"	"EOBD lamp"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"5"	"Fuel pump relay"

"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"6"	"Cooling fan relay 1st speed"
"Iveco"	"Daily IV"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"7"	"Cooling fan relay 2st speed"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Adaptations"	"1"	"Self-adaptions parameters reset"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Adaptations"	"2"	"Throttle learn storage"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"1"	"Hardware version"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"2"	"Software version"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"3"	"Iveco part number"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"4"	"ECU hardware number"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"1"	"Engine speed"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"2"	"Target engine speed"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"3"	"Battery voltage"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"4"	"Vehicle speed"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"5"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"6"	"Accelerator pedal unit potentiometer 1"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"7"	"Accelerator pedal unit potentiometer 2"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"8"	"Throttle angle"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"9"	"Throttle angle 2"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"10"	"Throttle valve duty cycle"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"11"	"Air temperature"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"12"	"Coolant temperature"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"13"	"Gas rail temperature"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"14"	"Catalyst temperature"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"15"	"Engine oil temperature"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"16"	"Ignition advance"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"17"	"Middle advance"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"18"	"Air mass quantity per cycle"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"19"	"Intake air quantity"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"20"	"Lambda sensor, voltage"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"21"	"Mixture control for lambda feeler"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"22"	"Mixture self-adapting"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"23"	"Injection time"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"24"	"Dwell time Coil 1"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"25"	"Dwell time Coil 2"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"26"	"Dwell time Coil 3"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"27"	"Dwell time Coil 4"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"28"	"Time max speed exceeded"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"29"	"Gas rail pressure"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"30"	"Gas tank pressure"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"31"	"Boost pressure"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"32"	"Boost Pressure Setpoint"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"33"	"Intake pressure"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"34"	"Ambient pressure"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"35"	"Extrapolated pressure"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"36"	"Water temperature sensor"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"37"	"Absolute pressure sensor"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"38"	"Throttle positon sensor Angle1-voltage"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"39"	"Throttle positon sensor Angle2-voltage"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"40"	"Total Vehicle Distance"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"41"	"Vehicle distance before the last programming"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"42"	"Numbers of overrevs"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"43"	"Max speed reached"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"44"	"Wastegate duty cycle"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"45"	"ECU hardware number"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"46"	"Middle indicated torque"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"47"	"Requested nominal indicated torque"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"48"	"Nominal indicated torque"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"49"	"Requested torque from min controller"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"50"	"Friction Torque"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"51"	"Fuel consumption"

"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"1"	"Control for air conditioning (if present)"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"2"	"Coil control 1"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"3"	"Coil control 2"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"4"	"Coil control 3"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"5"	"Coil control 4"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"6"	"Injector control 1"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"7"	"Injector control 2"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"8"	"Injector control 3"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"9"	"Injector control 4"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"10"	"Fuel pump relay control"
"Iveco"	"Daily IV"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"11"	"Cooling fan 1 relay control"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"1"	"Input shaft speed"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"2"	"Transmission output speed"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"3"	"Vehicle speed"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"4"	"ECU temperature"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"5"	"Operating time Ecu"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"6"	"Internal voltage supply microcontroller (Reference value 0,75 V batt)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"7"	"UKL30 battery voltage pin 4-5"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"8"	"Supply voltage (+15)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"9"	"Plus for control motor of clutch actuator"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"10"	"Minus for control motor of clutch actuator"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"11"	"Battery voltage for clutch actuator sensors"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"12"	"Plus for control motor of the gearbox actuator (Shift)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"13"	"Minus for control motor of the gearbox actuator (Shift)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"14"	"Plus for control motor of the gearbox actuator (Select)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"15"	"Minus for control motor of the gearbox actuator (Select)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"16"	"Gearbox actuator voltage supply"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"17"	"Battery voltage"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"18"	"Accelerator pedal position"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"19"	"Wheel speed, left front"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"20"	"Wheel speed, right front"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"21"	"Wheel speed, left rear"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"22"	"Wheel speed, right rear"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"23"	"Engine torque reference value"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"24"	"Engine torque requested by driver"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"25"	"Engine torque requested by driver"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"26"	"Engine torque"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"27"	"Engine torque"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"28"	"Engine friction torque"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"29"	"Engine friction torque"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"30"	"Engine crankshaft torque"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"31"	"Engine crankshaft torque"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"32"	"Current at cluth motor"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"33"	"Clutch position"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"34"	"Touchpoint position Eeprom"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"35"	"Absolute clutch stroke (Reference value mm. 27,5 <x< 28,2)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"36"	"Absolute clutch stroke touch-point (Reference value mm. 12<x< 18)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"37"	"Current at Select motor"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"38"	"Select position"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"39"	"Current at shift motor"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"40"	"Shift position"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"41"	"Relative position of gate 1 to 5/6 (Reference value 65-67 %)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"42"	"Relative position of gate 3 to 5/6 (Reference value 32-34 %)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"43"	"Select position of forward gear 1 (Ref. value mm -1-+1)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"44"	"Shift position of forward gear 1 (Ref. value mm 11-15)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"45"	"Select position of forward gear 2 (Ref. value mm -1-+1)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"46"	"Select position of forward gear 3 (Ref. value mm 3,5-5,5)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"47"	"Shift position of forward gear 3 (Ref. value mm 11-15)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"48"	"Select position of forward gear 4 (Ref. value mm 3,5-5,5)"

"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"49"	"Select position of forward gear 5 (Ref. value mm 7,5-9,5)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"50"	"Shift position of forward gear 5 (Ref. value mm 11-15)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"51"	"Select position of forward gear 6 (Ref. value mm 7,5-9,5)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"52"	"Select position of reverse gear (Ref. value mm -5--3)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"53"	"Shift position of reverse gear (Ref. value mm 11-15)"
"Iveco"	"Daily IV"	"Gearbox / Automatic Transmission"	"ESV1"	"Live Parameters"	"54"	"Distance of neutral to reverse-gear"
"Iveco"	"Daily IV"	"Immobiliser"	"Immobilizer"	"ECU Information"	"1"	"Hardware version"
"Iveco"	"Daily IV"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"1"	"Number of keys stored"
"Iveco"	"Daily IV"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"2"	"System time, days"
"Iveco"	"Daily IV"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"3"	"System time, hours"
"Iveco"	"Daily IV"	"Immobiliser"	"Immobilizer"	"Live Parameters"	"4"	"System time, minutes"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"1"	"Iveco drawing number"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"2"	"ECU hardware number"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"3"	"Hardware version"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"4"	"ECU software number"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"5"	"Software version"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"6"	"Date of production"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"7"	"Programming date"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"8"	"Pic-number"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"9"	"Vin-number"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"10"	"Configuration code"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"1"	"Total Vehicle Distance"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"2"	"Vehicle speed"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"3"	"Number of engine revs"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"4"	"Coolant temperature"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"5"	"Fuel gauge"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"6"	"Battery voltage"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"7"	"External air temperature"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"8"	"Disabling/Enabling status for the security belt acoustic signal"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"9"	"Position of headlamp alignment adjustment"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"10"	"Gear lever position, automatic gearbox"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"11"	"Display brightness level"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"12"	"Buzzer volume"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"13"	"Volume of the keys"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"14"	"Ignition (+15)"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"15"	"Up" key of headlamp alignment adjustment"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"16"	"Down" key of headlamp alignment adjustment"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"17"	"Key mode +"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"18"	"Key mode -"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"19"	"Key mode"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"20"	"Trip key"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"21"	"EOBD lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"1"	"Indicator lamp engine temperature"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"2"	"Fuel indication in instrument panel"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"3"	"Charge control lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"4"	"Oil pressure lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"5"	"EOBD lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"6"	"Indicator Brake Lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"7"	"Side light indicator light"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"8"	"Main beam indicator lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"9"	"Rear fog light indicator lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"10"	"Rear foglight warning lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"11"	"Glowplug lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"12"	"ABS warning lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"13"	"Water in diesel filter lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"14"	"ASR/ESP warning lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"15"	"Generic warning light"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"16"	"Airbag warning light"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"17"	"Warning light for disabling passenger airbag"

"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"18"	"Seatbelt warning lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"19"	"Parking brake lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"20"	"Check engine lamp"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"21"	"Tachograph warning light"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"22"	"Display test"
"Iveco"	"Daily IV"	"Instrument / Dashboard"	"Marelli"	"Tests"	"23"	"Fuel gauge"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"ECU Information"	"1"	"Iveco drawing number"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"ECU Information"	"2"	"ECU hardware number"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"ECU Information"	"3"	"ECU software number"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"ECU Information"	"4"	"Software version"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"ECU Information"	"5"	"Programming date"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"ECU Information"	"6"	"Vin-number"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"1"	"Supply voltage"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"2"	"Resistance value for driver side airbag"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"3"	"Resistance value for passenger side airbag"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"4"	"Resistance value for left pretensioner"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"5"	"Resistance value for central pretensioner"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"6"	"Resistance value for right pretensioner"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"7"	"Resistance value for left head bag"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"8"	"Resistance value for right head bag"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Live Parameters"	"9"	"Resistance value for switch to passenger airbag inhibition"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Tests"	"1"	"Airbag warning light"
"Iveco"	"Daily IV"	"Restraints"	"Autoliv"	"Tests"	"2"	"Warning light for disabling passenger airbag"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"1"	"ECU hardware number"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"2"	"Hardware version"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"3"	"ECU software number"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"4"	"Software version"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"ECU Information"	"5"	"Date of production"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"1"	"Coolant temperature"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"2"	"Battery voltage"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"3"	"Fuel pump"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"4"	"Burn air blower"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"5"	"Glow plug"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"6"	"Burner"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Live Parameters"	"7"	"Co2 digital value"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"1"	"Heater"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"2"	"Dosing pump"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"3"	"Combustion air fan"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"4"	"Auxiliary Heater Coolant Pump"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"5"	"Glow"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"6"	"Starting charge"
"Iveco"	"Daily V"	"Additional/Stationary Heater"	"Webasto TT"	"Tests"	"7"	"Vehicle fan activation"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"1"	"Boost pressure sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"2"	"Change air mass meter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"3"	"Change differential pressure sensor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"4"	"Lambda sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"5"	"Particle filter replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"6"	"Rail pressure control valve replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"7"	"Turbocharger replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"8"	"Rail pressure sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"9"	"Rail pressure sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Adaptations"	"10"	"Oil change"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"1"	"Iveco part number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"2"	"ECU serial number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"3"	"ECU software"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"4"	"Supplier ECU software version number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"5"	"Vin-number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"6"	"Van"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"7"	"Pic-number"

"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"8"	"Alphacode EOL"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"9"	"DIS"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"10"	"EOL_table part number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"11"	"IMA/NIMA code"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"12"	"Engine type"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"13"	"Engine serial number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"ECU Information"	"14"	"Programming date"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"1"	"Engine revolution"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"2"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"3"	"Fuel pressure"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"4"	"Battery voltage"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"5"	"Oil temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"6"	"Coolant temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"7"	"Intake air temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"8"	"Fuel temperature sensor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"9"	"Boost air temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"10"	"Boost pressure"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"11"	"Boost Pressure Setpoint"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"12"	"Ambient pressure"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"13"	"Vehicle speed"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"14"	"Turbocharger actuator"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"15"	"TVA position"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"16"	"Setp quant for main injection"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"17"	"Des inject quant. PII 1"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"18"	"Current injection quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"19"	"Current injection quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"20"	"Regeneration counter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"21"	"Intake air quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"22"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"23"	"Temperature before catalytic converter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"24"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"25"	"Temperature after catalytic converter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"26"	"Actual oxygen concentration"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"27"	"Voltage level at output of lambda sensor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"28"	"Resistance value lambda heater (if present)"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"29"	"Accelerator pedal position"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"30"	"Advance injection"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"31"	"Particle quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"32"	"Pressure difference input/output particle trap"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Live Parameters"	"33"	"Air conditioner pressure signal"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"1"	"Relay for air conditioner compressor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"2"	"Relay, heated fuel filter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"3"	"Glow plug relay"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"4"	"EOBD lamp"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"5"	"Fuel pump relay"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"6"	"Cooling fan relay 1st speed"
"Iveco"	"Daily V"	"Engine Diesel"	"F1A 2.3 EDC17"	"Tests"	"7"	"Cooling fan relay 2st speed"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"1"	"Boost pressure sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"2"	"Change air mass meter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"3"	"Change differential pressure sensor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"4"	"Lambda sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"5"	"Particle filter replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"6"	"Rail pressure control valve replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"7"	"Turbocharger replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"8"	"Rail pressure sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"9"	"Rail pressure sensor replacement"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Adaptations"	"10"	"Oil change"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"1"	"Iveco part number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"2"	"ECU serial number"

"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"3"	"ECU software"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"4"	"Supplier ECU software version number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"5"	"Vin-number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"6"	"Van"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"7"	"Pic-number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"8"	"Alphacode EOL"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"9"	"DIS"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"10"	"EOL_table part number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"11"	"IMA/NIMA code"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"12"	"Engine type"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"13"	"Engine serial number"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"ECU Information"	"14"	"Programming date"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"1"	"Engine revolution"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"2"	"Fuel pressure setpoint (rail pressure)"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"3"	"Fuel pressure"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"4"	"Battery voltage"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"5"	"Oil temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"6"	"Coolant temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"7"	"Intake air temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"8"	"Fuel temperature sensor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"9"	"Boost air temperature"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"10"	"Boost pressure"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"11"	"Boost Pressure Setpoint"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"12"	"Ambient pressure"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"13"	"Vehicle speed"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"14"	"Turbocharger actuator"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"15"	"TVA position"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"16"	"Setp quant for main injection"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"17"	"Des inject quant. PII 1"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"18"	"Current injection quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"19"	"Current injection quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"20"	"Regeneration counter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"21"	"Intake air quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"22"	"Desired air quantity for EGR monitoring device"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"23"	"Temperature before catalytic converter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"24"	"Exhaust gas temperature at particle trap"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"25"	"Temperature after catalytic converter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"26"	"Actual oxygen concentration"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"27"	"Voltage level at output of lambda sensor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"28"	"Resistance value lambda heater (if present)"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"29"	"Accelerator pedal position"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"30"	"Advance injection"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"31"	"Particle quantity"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"32"	"Pressure difference input/output particle trap"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Live Parameters"	"33"	"Air conditioner pressure signal"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"1"	"Relay for air conditioner compressor"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"2"	"Relay, heated fuel filter"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"3"	"Glow plug relay"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"4"	"EOBD lamp"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"5"	"Fuel pump relay"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"6"	"Cooling fan relay 1st speed"
"Iveco"	"Daily V"	"Engine Diesel"	"F1C 2.3 EDC17"	"Tests"	"7"	"Cooling fan relay 2st speed"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Adaptations"	"1"	"Self-adaptions parameters reset"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Adaptations"	"2"	"Throttle learn storage"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"1"	"Hardware version"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"2"	"Software version"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"3"	"Iveco part number"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"ECU Information"	"4"	"ECU hardware number"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"1"	"Engine speed"

"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"2"	"Target engine speed"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"3"	"Battery voltage"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"4"	"Vehicle speed"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"5"	"Accelerator pedal position"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"6"	"Accelerator pedal unit potentiometer 1"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"7"	"Accelerator pedal unit potentiometer 2"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"8"	"Throttle angle"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"9"	"Throttle angle 2"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"10"	"Throttle valve duty cycle"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"11"	"Air temperature"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"12"	"Coolant temperature"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"13"	"Gas rail temperature"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"14"	"Catalyst temperature"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"15"	"Engine oil temperature"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"16"	"Ignition advance"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"17"	"Middle advance"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"18"	"Air mass quantity per cycle"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"19"	"Intake air quantity"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"20"	"Lambda sensor, voltage"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"21"	"Mixture control for lambda feeler"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"22"	"Mixture self-adapting"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"23"	"Injection time"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"24"	"Dwell time Coil 1"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"25"	"Dwell time Coil 2"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"26"	"Dwell time Coil 3"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"27"	"Dwell time Coil 4"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"28"	"Time max speed exceeded"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"29"	"Gas rail pressure"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"30"	"Gas tank pressure"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"31"	"Boost pressure"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"32"	"Boost Pressure Setpoint"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"33"	"Intake pressure"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"34"	"Ambient pressure"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"35"	"Extrapolated pressure"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"36"	"Water temperature sensor"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"37"	"Absolute pressure sensor"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"38"	"Throttle positon sensor Angle1-voltage"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"39"	"Throttle positon sensor Angle2-voltage"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"40"	"Total Vehicle Distance"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"41"	"Vehicle distance before the last programming"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"42"	"Numbers of overrevs"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"43"	"Max speed reached"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"44"	"Wastegate duty cycle"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"45"	"ECU hardware number"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"46"	"Middle indicated torque"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"47"	"Requested nominal indicated torque"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"48"	"Nominal indicated torque"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"49"	"Requested torque from min controller"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"50"	"Friction Torque"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Live Parameters"	"51"	"Fuel consumption"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"1"	"Control for air conditioning (if present)"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"2"	"Coil control 1"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"3"	"Coil control 2"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"4"	"Coil control 3"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"5"	"Coil control 4"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"6"	"Injector control 1"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"7"	"Injector control 2"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"8"	"Injector control 3"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"9"	"Injector control 4"

"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"10"	"Fuel pump relay control"
"Iveco"	"Daily V"	"Engine Petrol"	"3.0 CNG 5SF"	"Tests"	"11"	"Cooling fan 1 relay control"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"1"	"Vin-number"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"2"	"ECU serial number"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"3"	"Iveco part number (HW+SW)"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"4"	"Part number Iveco (HW)"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"5"	"ECU HW version number"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"6"	"Part number Iveco (SW)"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"7"	"ECU SW version number"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"ECU Information"	"8"	"Software revision"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"1"	"Engine revolutions"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"2"	"Fuel level"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"3"	"Vehicle speed"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"4"	"Coolant temperature"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"5"	"Battery voltage"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"6"	"External temperature"
"Iveco"	"Daily V"	"Instrument / Dashboard"	"Marelli"	"Live Parameters"	"7"	"KM counter reading"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"ECU Information"	"1"	"Iveco drawing number"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"ECU Information"	"2"	"ECU hardware number"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"ECU Information"	"3"	"ECU software number"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"ECU Information"	"4"	"Software version"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"ECU Information"	"5"	"Programming date"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"ECU Information"	"6"	"Vin-number"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"1"	"Supply voltage"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"2"	"Resistance value for driver side airbag"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"3"	"Resistance value for passenger side airbag"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"4"	"Resistance value for left pretensioner"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"5"	"Resistance value for central pretensioner"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"6"	"Resistance value for right pretensioner"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"7"	"Resistance value for left head bag"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"8"	"Resistance value for right head bag"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Live Parameters"	"9"	"Resistance value for switch to passenger airbag inhibition"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Tests"	"1"	"Airbag warning light"
"Iveco"	"Daily V"	"Restraints"	"Autoliv"	"Tests"	"2"	"Warning light for disabling passenger airbag"