

Saab/Model	System	ECU	Feature	Definition
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Front left wheel speed sensor
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Front right wheel speed sensor
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Rear left wheel speed sensor
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Rear right wheel speed sensor
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Brake light switch
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Sensor fault output
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Battery voltage
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Engine torque
9-3 I	Brake System	Bosch 5.3/TC	Live Parameters	Engine speed
9-3 I	Brake System	Bosch 5.4	Live Parameters	Front left wheel speed sensor
9-3 I	Brake System	Bosch 5.4	Live Parameters	Front right wheel speed sensor
9-3 I	Brake System	Bosch 5.4	Live Parameters	Rear left wheel speed sensor
9-3 I	Brake System	Bosch 5.4	Live Parameters	Rear right wheel speed sensor
9-3 I	Brake System	Bosch 5.4	Live Parameters	Brake light switch
9-3 I	Brake System	Bosch 5.4	Live Parameters	Sensor fault output
9-3 I	Brake System	Bosch 5.4	Live Parameters	Battery voltage
9-3 I	Climate Control	Climate control system	ECU Information	VIN code
9-3 I	Climate Control	Climate control system	ECU Information	Part number
9-3 I	Climate Control	Climate control system	ECU Information	Hardware
9-3 I	Climate Control	Climate control system	ECU Information	Software version number
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	ECU Information	VIN code
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	ECU Information	Part number
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	ECU Information	Hardware
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	ECU Information	Software number
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Revolution signal
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	System voltage
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Coolant temperature
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Engine oil
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Air pressure sensor
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Air mass meter
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Load pressure
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Pump speed
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Revolution signal
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Idle
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Fuel quantity
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Fuel quantity
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Fuel temperature
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Inlet air temperature
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Throttle potentiometer
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Road speed signal
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Revolution signal
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	High pressure diagnosis
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	High pressure diagnosis
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Charging pressure command
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Load pressure
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	EGR command

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	PWM swirl level control solenoid valve
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	PWM charging pressure regulation
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Check engine lamp
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Idle switch
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Pressure switch climate control system
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	AC-relay
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Diagnosis, glow time relay
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Glow time relay
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Glow time lamp
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Brake pedal switch
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Brake pedal switch
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Live Parameters	Ceramic heater
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Tests	Check engine lamp
9-3 I	Engine Diesel	2.2TiD - D223L MSA15	Tests	AC-relay
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	VIN code
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Part number
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Hardware
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Software number
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Battery voltage
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Engine speed
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Injection pump
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Vehicle speed
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	MAF (Mass Air Flow)
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	EGR-valve demand
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	EGR valve
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Swirl control valve SCV
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Coolant temperature
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Oil temperature
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Charge air pressure, duty factor
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Charge air pressure control
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Inlet air temperature
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Atmospheric pressure
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel temperature
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Pedal position sensor
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Idle switch
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Accelerator pedal
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake light switch
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Ignition on
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Main relay
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Glow plug relay
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Glowplug pre-operation
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Cruise control switch, reset/off
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Clutch pedal switch
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake switch
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Glow time lamp
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Glow time relay

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	AC-relay
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Swirl control valve SCV
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	EGR valve
9-3 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Charge air pressure control
9-3 I	Engine Petrol	2.0 T Trionic T7	ECU Information	Vehicle identification VIN
9-3 I	Engine Petrol	2.3 T Trionic T7	ECU Information	Vehicle identification VIN
9-3 I	Engine Petrol	2.3 T Trionic T7	ECU Information	Part number
9-3 I	Engine Petrol	2.0 T Trionic T7	ECU Information	Part number
9-3 I	Engine Petrol	2.0 T Trionic T7	ECU Information	Hardware number
9-3 I	Engine Petrol	2.3 T Trionic T7	ECU Information	Hardware number
9-3 I	Engine Petrol	2.3 T Trionic T7	ECU Information	Hardware version
9-3 I	Engine Petrol	2.0 T Trionic T7	ECU Information	Hardware version
9-3 I	Engine Petrol	2.3 T Trionic T7	ECU Information	Software number
9-3 I	Engine Petrol	2.0 T Trionic T7	ECU Information	Software number
9-3 I	Engine Petrol	2.3 T Trionic T7	ECU Information	Software version
9-3 I	Engine Petrol	2.0 T Trionic T7	ECU Information	Software version
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Bypass valve (turbo)
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Bypass valve (turbo)
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Limp-home relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Limp-home relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Evap-valve
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Evap-valve
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Main relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Main relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel pump relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel pump relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	AC-relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	AC-relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Boost pressure regulation
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Boost pressure regulation
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Throttle position sensor 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Throttle position sensor 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Kick-down
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Kick-down
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	CHECK-ENGINE-lamp
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	CHECK-ENGINE-lamp
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	SHIFT UP lamp
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	SHIFT UP lamp
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Indicator lamp
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Indicator lamp
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel consumed since start
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel consumed since start
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine torque
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine torque

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Firing angle
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Firing angle
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Injection, final angle
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Injection, final angle
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Injection time
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Injection time
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	A/C requested
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	A/C requested
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel pressure when the engine was cut-off
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel pressure when the engine was cut-off
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control switch
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control switch
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control switch
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control switch
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control switch
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control switch
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake pedal-/clutch connector
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake pedal-/clutch connector
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Throttle position sensor 1
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Throttle position sensor 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Throttle position sensor 2
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Throttle position sensor 2
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator pedal sensor 2
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator pedal sensor 2
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator pedal sensor 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator pedal sensor 1
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Revolution signal
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Revolution signal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Inlet pressure
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Inlet pressure
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Atmospheric pressure
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Atmospheric pressure
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load pressure
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load pressure
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda sensor 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda sensor 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knock sensor
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knock sensor
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Coolant temperature
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Coolant temperature
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air inlet temperature sensor
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air inlet temperature sensor
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Road speed signal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Road speed signal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Road speed signal
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Road speed signal

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda probe heating (bank 1, sond 1)
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda probe heating (bank 1, sond 1)
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Combustion signal, cylinders 1+2
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Combustion signal, cylinders 1+2
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Combustion signal, cylinders 3+4
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Combustion signal, cylinders 3+4
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass meter
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass meter
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/combustion
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/combustion
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Torque control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Torque control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Torque control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Torque control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Current consumption
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Current consumption
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Main relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Main relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake pedal light
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake pedal light
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Multiplicative lambda adaptation
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Multiplicative lambda adaptation
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Additive adaption
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Additive adaption
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load pressure
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load pressure
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.1
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.1
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.2
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.2
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.3
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.3
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.4
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.4
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	EVAP system
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	EVAP system
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda regulation
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda regulation

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/combustion
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/combustion
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Stored faultcode
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Stored faultcode
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator pedal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator pedal
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Basic load
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Basic load
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Idle control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Idle control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Dash pot
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Dash pot
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Max engine torque
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Max engine torque
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Manual transmission
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Manual transmission
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Automatic transmission
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Automatic transmission
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Automatic transmission, reverse
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Automatic transmission, reverse
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Automatic transmission
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Automatic transmission
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	TCS
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	TCS
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake pedal light
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake pedal light
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knock control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knock control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Max vehicle speed
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Max vehicle speed
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Max engine speed
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Max engine speed
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Max turbo speed
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Max turbo speed
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Idle control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Idle control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Camshaft position synchronised
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Camshaft position synchronised
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Idle control
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Idle control
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control was not used
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control was not used
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake light was on
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake light was on

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Clutch or brake switch was on
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Clutch or brake switch was on
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed was below 40 km/h
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed was below 40 km/h
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed was below 40 km/h
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed was below 40 km/h
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	TCS was active
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	TCS was active
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Gear was disengaged
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Gear was disengaged
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cancel was used
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cancel was used
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Switch cruise control in OFF position or trouble code detected
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Switch cruise control in OFF position or trouble code detected
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Switch cruise control in ON position and no trouble code detected
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Switch cruise control in ON position and no trouble code detected
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	No brake light
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	No brake light
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	No clutch or brake switch
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	No clutch or brake switch
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed above 40 km/h
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed above 40 km/h
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed above 40 km/h
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed above 40 km/h
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	No deceleration
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	No deceleration
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	No TCS active
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	No TCS active
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Gear detected
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Gear detected
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Switch in neutral position before on
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Switch in neutral position before on
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda regulation
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda regulation
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Stored faultcode
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Stored faultcode
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine revolutions since start to few
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine revolutions since start to few
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	O2 sensor 1 not yet left 0,4 - 0,6V
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	O2 sensor 1 not yet left 0,4 - 0,6V
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Coolant temp too low, released pedal
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Coolant temp too low, released pedal
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Coolant temp too low, pressed pedal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Coolant temp too low, pressed pedal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel shut off
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel shut off

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load too high
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load too high
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load too low
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load too low
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine speed too low
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine speed too low
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load transient and low coolant temperature
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load transient and low coolant temperature
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel shut off
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel shut off
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Stored faultcode
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Stored faultcode
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator fully pressed during start
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator fully pressed during start
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine braking
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine braking
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine speed too high
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine speed too high
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/Combustion too high
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/Combustion too high
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	+15 signal
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	+15 signal
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Limp-home relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Limp-home relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/combustion calculated
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/combustion calculated
9-3 I	Engine Petrol	2.3 T Trionic T7	Live Parameters	Max permitted engine torque at current engine speed
9-3 I	Engine Petrol	2.0 T Trionic T7	Live Parameters	Max permitted engine torque at current engine speed
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	AC-relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	AC-relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Bypass valve (turbo)
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Bypass valve (turbo)
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Main relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Main relay
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Fuel pump relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Fuel pump relay
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Lambda probe heating (bank 1, sond 1)
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Lambda probe heating (bank 1, sond 1)
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Injection valve 1
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Injection valve 1
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Injection valve 2
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Injection valve 2
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Injection valve 3
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Injection valve 3
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Injection valve 4
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Injection valve 4

Saab/Model	System	ECU	Feature	Definition
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Ignition coil 1
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Ignition coil 1
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Ignition coil 2
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Ignition coil 2
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Ignition coil 3
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Ignition coil 3
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Ignition coil 4
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Ignition coil 4
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Evap-valve
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Evap-valve
9-3 I	Engine Petrol	2.0 T Trionic T7	Tests	Charging pressure valve
9-3 I	Engine Petrol	2.3 T Trionic T7	Tests	Charging pressure valve
9-3 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Part number
9-3 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Hardware
9-3 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Software number
9-3 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Software version number
9-3 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Programming date
9-3 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Diagnostic version
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Vehicle speed
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Engine speed
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Coolant temperature
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel consumption
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Distance indicator
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Trip meter
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Display
9-3 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Button for night panel
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat Night Panel, Filtered
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	LCD Dimmer value
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Indoor light intensity
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Outside temperature sensor
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Coolant fluid level sensor, low level
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Washer fluid level sensor, low level
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Front lamp failure
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Month
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Day
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Hour
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Minutes
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Seconds
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Horn
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Control unit in steering wheel
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Indoor light sensor
9-3 I	Instrument / Dashboard	SID - Info display	Live Parameters	Outside temperature sensor
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Ignition +15

Saab/Model	System	ECU	Feature	Definition
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Belt buckle switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Hood switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Rear seat heater
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk key opening disarm switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Alarm sensors disable
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key unlock switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key lock switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver's door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk opening switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Central locking
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk lock motor
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Brake pedal light
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Parking light, rear left
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Parking light, rear right
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Road speed signal
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Outside temperature sensor
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Ignition +15
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Belt buckle switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Rear seat heater
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk key opening disarm switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Alarm sensors disable
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Driver door key unlock switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Driver door key lock switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Driver's door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Passenger door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Passenger door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Passenger door
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk opening switch
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Central locking
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk lock motor
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Brake pedal light
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Parking light, rear left
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Parking light, rear right
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Road speed signal
9-3 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Outside temperature sensor
9-3 I	Restraints	Airbag	ECU Information	Part number
9-3 I	Restraints	Airbag	ECU Information	ECU ID
9-3 I	Restraints	Airbag	Live Parameters	Battery voltage
9-3 I	Restraints	Airbag	Live Parameters	Check lamp
9-3 I	Restraints	Airbag	Live Parameters	Driver airbag
9-3 I	Restraints	Airbag	Live Parameters	Passenger airbag

Saab/Model	System	ECU	Feature	Definition
9-3 I	Restraints	Airbag	Live Parameters	Driver pretensioner
9-3 I	Restraints	Airbag	Live Parameters	Passenger pretensioner
9-3 I	Restraints	Airbag	Live Parameters	Driver side airbag
9-3 I	Restraints	Airbag	Live Parameters	Passenger side airbag
9-3 I	SLR - Service light reset	Reset service	Adaptations	Recall service message
9-3 I	SLR - Service light reset	Reset service	Live Parameters	Month
9-3 I	SLR - Service light reset	Reset service	Live Parameters	Day
9-3 I	SLR - Service light reset	Reset service	Live Parameters	Hour
9-3 I	SLR - Service light reset	Reset service	Live Parameters	Minutes
9-3 I	SLR - Service light reset	Reset service	Live Parameters	Seconds
9-3 II	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Serial number
9-3 II	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Diagnostic version
9-3 II	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Diagnosis identity
9-3 II	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Software version number
9-3 II	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Part number
9-3 II	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Hardware version
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Heater blower output
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Flame detected
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Start attempts, too many failed attempts
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Overheat protection thermostat, too high signal
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Circulation pump
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Heater power
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Fuel pump
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Glow plug
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Coolant temperature
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Coolant temperature
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Flame sensor
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Heater
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Starter condition
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Starter condition
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Cooling fan
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Glow plug
9-3 II	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Glow plug
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Serial number
9-3 II	Body Control Module	BCM - Body control module	ECU Information	VIN code
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Programming date
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Diagnostic version
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Diagnosis identity
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Software version number
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Part number
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Hardware version
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Software version number
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Part number
9-3 II	Body Control Module	BCM - Body control module	ECU Information	Hardware version
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Left Front Door Lock Switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Right Front Door Lock Switch

Saab/Model	System	ECU	Feature	Definition
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Rear left door ajar switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Rear right door ajar switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Trunk Handle Switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Trunk lid switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Hood Ajar Switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Glass break sensor detection
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Light switch, position 1
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Light switch, position 2
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Hazard Light Switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Front fogs switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Rear fog lights switch
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Power supply
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Day
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Time
9-3 II	Body Control Module	BCM - Body control module	Live Parameters	Security code
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Serial number
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	VIN code
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Programming date
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Diagnostic version
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Diagnosis identity
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Software version number
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Part number
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Hardware version
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Software version number
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Part number
9-3 II	Body Control Module	CIM - Column Integrated Module	ECU Information	Hardware version
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Configuration
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Cruise control
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Rain sensor
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	With rear wiper
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Automatic gearbox
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Sentronic (Gear Shift Pads)
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Steering Wheel Buttons
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Control unit power supply
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Key
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Wiper stalk position
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Switch, direction indicator
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	High beam switch
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Set cruise acceleration (+)
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Set cruise deceleration (-)
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Cruise control switch
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Steering angle
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Steering angle sensor
9-3 II	Body Control Module	CIM - Column Integrated Module	Live Parameters	Vehicle speed
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	VIN code
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Part number

Saab/Model	System	ECU	Feature	Definition
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Hardware
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Software version number
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	AC
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Cooling fan low speed
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Cooling fan high speed
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Ignition +15
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Engine running
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Evaporator temperature
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Battery voltage
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Coolant temperature
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	A/C pressure
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Left hand indicator relay
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Right hand indicator relay
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rear fog lights
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Front fog lights
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Main beam
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Dipped beam
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Hazard warning flashers
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rheostat
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Interior lighting
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Luggage space lighting
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Driver's door
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Passenger door
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Right rear door
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Left rear door
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Button for night panel
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Windscreen wiper intermittent setting
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rear window heating
9-3 II	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Fuel pressure when the engine was cut-off
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Serial number
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Programming date
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Diagnostic version
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Diagnosis identity
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Software version number
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Part number
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Hardware version
9-3 II	Body Control Module	REC - Rear electrical centre	ECU Information	Software version number
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Battery voltage
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Brake light switch
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Ignition on
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Lock contact, trunk lid
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Luggage space lighting
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Rear window heating
9-3 II	Body Control Module	REC - Rear electrical centre	Live Parameters	Rear wiper requested
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Serial number
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Programming date

Saab/Model	System	ECU	Feature	Definition
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Diagnostic version
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Diagnosis identity
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Software version number
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Part number
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Hardware version
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Software version number
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Part number
9-3 II	Body Control Module	UEC - Underhood electronic center	ECU Information	Hardware version
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Ignition on
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Transport mode active
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Horn
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Front wipers high speed requested
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Front wipers low speed requested
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Power supply
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Front fog lights
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Dipped beam
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Lamp, left dipped headlight
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Lamp, right dipped headlight
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Lamp, left main beam
9-3 II	Body Control Module	UEC - Underhood electronic center	Live Parameters	Lamp, right main beam
9-3 II	Brake System	ABS/ESP	Adaptations	Steering angle calibration
9-3 II	Brake System	ABS/ESP	ECU Information	Serial number
9-3 II	Brake System	ABS/ESP	ECU Information	Diagnostic version
9-3 II	Brake System	ABS/ESP	ECU Information	Diagnosis identity
9-3 II	Brake System	ABS/ESP	ECU Information	Software version number
9-3 II	Brake System	ABS/ESP	ECU Information	Part number
9-3 II	Brake System	ABS/ESP	ECU Information	Hardware version
9-3 II	Brake System	ABS/ESP	ECU Information	Software version number
9-3 II	Brake System	ABS/ESP	ECU Information	Part number
9-3 II	Brake System	ABS/ESP	ECU Information	Hardware version
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear right in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear right out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear left in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear left out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front right in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front right out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front left in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front left out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear right in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear right out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear left in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid rear left out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front right in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front right out
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front left in
9-3 II	Brake System	ABS/ESP	Live Parameters	Solenoid front left out

Saab/Model	System	ECU	Feature	Definition
9-3 II	Brake System	ABS/ESP	Live Parameters	Power supply
9-3 II	Brake System	ABS/ESP	Live Parameters	Front left wheel speed sensor
9-3 II	Brake System	ABS/ESP	Live Parameters	Front right wheel speed sensor
9-3 II	Brake System	ABS/ESP	Live Parameters	Rear left wheel speed sensor
9-3 II	Brake System	ABS/ESP	Live Parameters	Rear right wheel speed sensor
9-3 II	Brake System	ABS/ESP	Live Parameters	Brake switch
9-3 II	Brake System	ABS/ESP	Live Parameters	TCS/ESP warning lamp
9-3 II	Brake System	ABS/ESP	Live Parameters	Check ABS-lamp
9-3 II	Brake System	ABS/ESP	Live Parameters	Pump motor/motor relay
9-3 II	Brake System	ABS/ESP	Live Parameters	Valve relay, ABS
9-3 II	Climate Control	Climate control system	ECU Information	Serial number
9-3 II	Climate Control	Climate control system	ECU Information	Programming date
9-3 II	Climate Control	Climate control system	ECU Information	Diagnostic version
9-3 II	Climate Control	Climate control system	ECU Information	Diagnosis identity
9-3 II	Climate Control	Climate control system	ECU Information	Software version number
9-3 II	Climate Control	Climate control system	ECU Information	Part number
9-3 II	Climate Control	Climate control system	ECU Information	Hardware version
9-3 II	Climate Control	Climate control system	ECU Information	Software version number
9-3 II	Climate Control	Climate control system	ECU Information	Part number
9-3 II	Climate Control	Climate control system	ECU Information	Hardware version
9-3 II	Climate Control	Climate control system	Live Parameters	Sun sensor left cell
9-3 II	Climate Control	Climate control system	Live Parameters	Sun sensor right cell
9-3 II	Climate Control	Climate control system	Live Parameters	Compartement temperature
9-3 II	Climate Control	Climate control system	Live Parameters	Recirculation
9-3 II	Climate Control	Climate control system	Live Parameters	Auto button
9-3 II	Climate Control	Climate control system	Live Parameters	Rear window heating
9-3 II	Climate Control	Climate control system	Live Parameters	AC button
9-3 II	Climate Control	Climate control system	Live Parameters	Fan +
9-3 II	Climate Control	Climate control system	Live Parameters	Fan -
9-3 II	Climate Control	Climate control system	Live Parameters	Left temperature Increase
9-3 II	Climate Control	Climate control system	Live Parameters	Left temperature Decrease
9-3 II	Climate Control	Climate control system	Live Parameters	Right temperature Increase
9-3 II	Climate Control	Climate control system	Live Parameters	Right temperature Decrease
9-3 II	Climate Control	Climate control system	Live Parameters	Defroster
9-3 II	Climate Control	Climate control system	Live Parameters	Ventilation knob
9-3 II	Climate Control	Climate control system	Live Parameters	Floor button
9-3 II	Climate Control	Climate control system	Live Parameters	Inlet air fan
9-3 II	Climate Control	Climate control system	Live Parameters	AC compressor
9-3 II	Climate Control	Climate control system	Live Parameters	AC pressure sensor
9-3 II	Door	DDM - Driver door module	ECU Information	Serial number
9-3 II	Door	DDM - Driver door module	ECU Information	Programming date
9-3 II	Door	DDM - Driver door module	ECU Information	Diagnostic version
9-3 II	Door	DDM - Driver door module	ECU Information	Diagnosis identity
9-3 II	Door	DDM - Driver door module	ECU Information	Software version number
9-3 II	Door	DDM - Driver door module	ECU Information	Part number
9-3 II	Door	DDM - Driver door module	ECU Information	Hardware version

Saab/Model	System	ECU	Feature	Definition
9-3 II	Door	DDM - Driver door module	ECU Information	Software version number
9-3 II	Door	DDM - Driver door module	ECU Information	Part number
9-3 II	Door	DDM - Driver door module	ECU Information	Hardware version
9-3 II	Door	DDM - Driver door module	Live Parameters	Driver window down
9-3 II	Door	DDM - Driver door module	Live Parameters	Driver window up
9-3 II	Door	DDM - Driver door module	Live Parameters	Passenger window down
9-3 II	Door	DDM - Driver door module	Live Parameters	Passenger window up
9-3 II	Door	DDM - Driver door module	Live Parameters	Window rear left, down
9-3 II	Door	DDM - Driver door module	Live Parameters	Window rear left, up
9-3 II	Door	DDM - Driver door module	Live Parameters	Window rear right, down
9-3 II	Door	DDM - Driver door module	Live Parameters	Window rear right, up
9-3 II	Door	PDM - Passanger door module	ECU Information	Serial number
9-3 II	Door	PDM - Passanger door module	ECU Information	VIN code
9-3 II	Door	PDM - Passanger door module	ECU Information	Programming date
9-3 II	Door	PDM - Passanger door module	ECU Information	Diagnostic version
9-3 II	Door	PDM - Passanger door module	ECU Information	Diagnosis identity
9-3 II	Door	PDM - Passanger door module	ECU Information	Software version number
9-3 II	Door	PDM - Passanger door module	ECU Information	Part number
9-3 II	Door	PDM - Passanger door module	ECU Information	Hardware version
9-3 II	Door	PDM - Passanger door module	ECU Information	Software version number
9-3 II	Door	PDM - Passanger door module	ECU Information	Part number
9-3 II	Door	PDM - Passanger door module	ECU Information	Hardware version
9-3 II	Door	RLDM - Rear left door module	ECU Information	Serial number
9-3 II	Door	RLDM - Rear left door module	ECU Information	Programming date
9-3 II	Door	RLDM - Rear left door module	ECU Information	Diagnostic version
9-3 II	Door	RLDM - Rear left door module	ECU Information	Diagnosis identity
9-3 II	Door	RLDM - Rear left door module	ECU Information	Software version number
9-3 II	Door	RLDM - Rear left door module	ECU Information	Part number
9-3 II	Door	RLDM - Rear left door module	ECU Information	Hardware version
9-3 II	Door	RLDM - Rear left door module	ECU Information	Software version number
9-3 II	Door	RLDM - Rear left door module	ECU Information	Part number
9-3 II	Door	RLDM - Rear left door module	ECU Information	Hardware version
9-3 II	Door	RRDM - Rear right door module	ECU Information	Serial number
9-3 II	Door	RRDM - Rear right door module	ECU Information	Programming date
9-3 II	Door	RRDM - Rear right door module	ECU Information	Diagnostic version
9-3 II	Door	RRDM - Rear right door module	ECU Information	Diagnosis identity
9-3 II	Door	RRDM - Rear right door module	ECU Information	Software version number
9-3 II	Door	RRDM - Rear right door module	ECU Information	Part number
9-3 II	Door	RRDM - Rear right door module	ECU Information	Hardware version
9-3 II	Door	RRDM - Rear right door module	ECU Information	Software version number
9-3 II	Door	RRDM - Rear right door module	ECU Information	Part number
9-3 II	Door	RRDM - Rear right door module	ECU Information	Hardware version
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Adaptations	Replace the fuel pressure sensor
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Adaptations	Replace the fuel pressure sensor
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Adaptations	Replace the fuel pressure sensor
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Adaptations	Particle filter replaced

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Adaptations	Particle filter replaced
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Adaptations	Particle filter replaced
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Adaptations	Particle filter pressure sensor replaced
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Adaptations	Particle filter pressure sensor replaced
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Adaptations	Particle filter pressure sensor replaced
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Adaptations	Pre catalyst replaced
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Adaptations	Pre catalyst replaced
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Adaptations	Pre catalyst replaced
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Adaptations	Lambda sensor change
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Adaptations	Lambda sensor change
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Adaptations	Lambda sensor change
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Adaptations	Particle filter regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Adaptations	Particle filter regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Adaptations	Particle filter regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	VIN code
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	VIN code
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	VIN code
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	Programming date
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	Programming date
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	Programming date
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	Diagnostic version
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	Diagnostic version
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	Diagnostic version
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	Diagnosis identity
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	Diagnosis identity
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	Diagnosis identity
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	Software number 1
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	Software number 1
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	Software number 1
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	Part number
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	Part number
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	Part number
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	ECU Information	Hardware
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	ECU Information	Hardware
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	ECU Information	Hardware
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Immobiliser
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Immobiliser
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Immobiliser
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Security code
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Security code
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Security code
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Incorrect security code entered
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Incorrect security code entered

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Incorrect security code entered
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fan relay 1
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fan relay 1
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fan relay 1
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fan relay 2
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fan relay 2
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fan relay 2
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fan relay 3
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fan relay 3
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fan relay 3
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Brake light switch
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Brake light switch
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Brake light switch
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Brake pedal switch
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Brake pedal switch
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Brake pedal switch
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Clutch pedal switch
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Clutch pedal switch
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Clutch pedal switch
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Oil pressure switch
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Oil pressure switch
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Oil pressure switch
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel pump
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel pump
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel pump
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Ignition +15
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Ignition +15
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Ignition +15
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Accelerator pedal
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Accelerator pedal
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Accelerator pedal
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Glow time relay
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Glow time relay
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Glow time relay
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Glow plug control
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Glow plug control
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Glow plug control
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Battery voltage
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Battery voltage
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Battery voltage
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Engine speed
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Engine speed
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Engine speed
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Target idle speed
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Target idle speed
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Target idle speed

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Vehicle speed
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Vehicle speed
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Vehicle speed
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Coolant temperature sensor
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Coolant temperature sensor
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Coolant temperature sensor
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Coolant temperature
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Coolant temperature
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Coolant temperature
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Air mass meter
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Air mass meter
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Air mass meter
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Pedal position track 1
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Pedal position track 1
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Pedal position track 1
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Pedal position track 2
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Pedal position track 2
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Pedal position track 2
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Accelerator pedal
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Accelerator pedal
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Accelerator pedal
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Manifold absolute pressure
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Manifold absolute pressure
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Manifold absolute pressure
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Manifold absolute pressure
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Manifold absolute pressure
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Manifold absolute pressure
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Intake manifold pressure, target value
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Intake manifold pressure, target value
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Intake manifold pressure, target value
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	EGR valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	EGR valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	EGR valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	EGR specified position
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	EGR specified position
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	EGR specified position
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Engine torque
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Engine torque
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Engine torque
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Requested torque (traction control)
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Requested torque (traction control)
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Requested torque (traction control)
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Particle Filter presssure sensor
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Particle Filter presssure sensor
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Particle Filter presssure sensor
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Particle filter pressure

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Particle filter pressure
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Particle filter pressure
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Exhaust temperature Sensor 1
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature Sensor 1
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature Sensor 1
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature 1
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature 1
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Exhaust temperature 1
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature Sensor 2
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature Sensor 2
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Exhaust temperature Sensor 2
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Exhaust temperature 2
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature 2
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Exhaust temperature 2
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel temperature
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel temperature
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel temperature
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel temp sensor
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel temp sensor
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel temp sensor
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Camshaft signal
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Camshaft signal
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Camshaft signal
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Current injected quantity
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Current injected quantity
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Current injected quantity
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Main injection timing
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Main injection timing
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Main injection timing
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel pressure sensor
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel pressure sensor
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel pressure sensor
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel pressure
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel pressure
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel pressure
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Target fuel pressure
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Target fuel pressure
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Target fuel pressure
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Swirl control valve SCV
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Swirl control valve SCV
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Swirl control valve SCV
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Pressure regulator valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Pressure regulator valve
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Pressure regulator valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Pressure regulator valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Pressure regulator valve

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Pressure regulator valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel Metering Solenoid Valve
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel Metering Solenoid Valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel Metering Solenoid Valve
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Fuel Metering Solenoid Valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Fuel Metering Solenoid Valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Fuel Metering Solenoid Valve
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Odometer
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Odometer
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Odometer
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Content of soot in the particle emission filter
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Content of soot in the particle emission filter
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Content of soot in the particle emission filter
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Distance travelled since last regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Distance travelled since last regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Distance travelled since last regeneration
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Live Parameters	Particle filter regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Live Parameters	Particle filter regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Live Parameters	Particle filter regeneration
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Cooling fan
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Cooling fan
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Cooling fan
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Fuel pump
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Fuel pump
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Fuel pump
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Glow time relay
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Glow time relay
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Glow time relay
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	EGR valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	EGR valve
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	EGR valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Fuel pre heating
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Fuel pre heating
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Fuel pre heating
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Swirl flap
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Swirl flap
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Swirl flap
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Throttle control valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Throttle control valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Throttle control valve
9-3 II	Engine Diesel	1.9TiDS - Z19DTH EDC16 - With DPF	Tests	Charging pressure valve
9-3 II	Engine Diesel	1.9TiD - Z19DTH EDC16 - With DPF	Tests	Charging pressure valve
9-3 II	Engine Diesel	1.9TiD - Z19DT EDC16 - With DPF	Tests	Charging pressure valve
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Serial number
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	VIN code
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Programming date

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Diagnostic version
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Diagnosis identity
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Software version number
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Part number
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Hardware version
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Immobiliser
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Security code
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Incorrect security code entered
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Cruise control
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Clutch switch
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake switch
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake light switch
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Cruise control, On/Off-switch
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Cruise control switch, resume
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Cruise control switch, set/acceleration
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake light switch
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake pedal switch
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	AC-relay
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Oil pressure
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Starter motor relay
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel shut off
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Glow time relay
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Malfunction indicator lamp (MIL)
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Main relay
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Ignition +15
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Power supply
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Engine speed
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Target engine speed
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Vehicle speed
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Coolant temperature sensor
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Coolant temperature
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Signal,temperature sensor, intake air
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	IAT - Intake air temperature
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Air mass meter
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Target air mass
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Boost pressure sensor
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Boost pressure
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Target overboost pressure
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Accelerator pedal sensor 1
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Accelerator pedal sensor 2
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Accelerator pedal position
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	EGR valve
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	EGR control element
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel level sensor
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel level

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Swirl control valve SCV
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Boost pressure regulation
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Atmospheric pressure sensor
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Atmospheric pressure
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel quantity
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Injection valve
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Oil temperature sensor
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Engine oil temperature
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel temp sensor
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel temperature
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Camshaft signal
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	AC-relay
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	Fuel shutoff valve
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	Turbo charge regulator valve
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	Cooling fan
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	Glow time relay
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	Malfunction indicator lamp (MIL)
9-3 II	Engine Diesel	2.2TiD - D223L PSG16	Tests	Swirl flap solenoid valve
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Serial number
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Serial number
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Serial number
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	VIN code
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	VIN code
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	VIN code
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Programming date
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Programming date
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Programming date
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Diagnostic version
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Diagnostic version
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Diagnostic version
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Diagnosis identity
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Diagnosis identity
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Diagnosis identity
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 1
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Software number 1
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Software number 1
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 2
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Software number 2
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Software number 2
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 3
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Software number 3
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Software number 3
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Software number 4
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 4
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Software number 4
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Hardware

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Hardware
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Hardware
9-3 II	Engine Petrol	1.8 T Trionic T8	ECU Information	Part number
9-3 II	Engine Petrol	2.0t Trionic T8	ECU Information	Part number
9-3 II	Engine Petrol	2.0T Trionic T8	ECU Information	Part number
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Immobiliser
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Immobiliser
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Immobiliser
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Immobiliser function not programmed
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Security code
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Security code
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Security code
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Incorrect security code entered
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Incorrect security code entered
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Incorrect security code entered
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Cruise control
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Cruise control
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Cruise control
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Clutch switch
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Clutch switch
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Clutch switch
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Brake switch
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Brake switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Brake switch
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Brake light switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Brake light switch
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Brake light switch
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Cruise control switch
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Cruise control switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Cruise control switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Set key
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Set key
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Set key
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Brake light switch
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Brake light switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Brake light switch
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Brake pedal switch
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Brake pedal switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Brake pedal switch
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	AC-relay
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	AC-relay
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	AC-relay
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Oil pressure
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Oil pressure

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oil pressure
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Secondary air pump
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Secondary air pump
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Secondary air pump
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Catalysator
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Catalysator
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Catalysator
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Carbon filter solenoid valve
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Carbon filter solenoid valve
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Carbon filter solenoid valve
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Status, lambda control
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Status, lambda control
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Status, lambda control
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Idle speed increase
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Idle speed increase
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Idle speed increase
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	A/C idle up
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	A/C idle up
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	A/C idle up
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Stored faultcode
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Stored faultcode
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Stored faultcode
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Malfunction indicator lamp (MIL)
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Malfunction indicator lamp (MIL)
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Malfunction indicator lamp (MIL)
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Engine stall
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Engine stall
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Engine stall
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Forced idle
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Forced idle
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Forced idle
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Throttle Control Malfunction
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Throttle Control Malfunction
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Throttle Control Malfunction
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Fuel pump relay
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Fuel pump relay
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fuel pump relay
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Main relay
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Main relay
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Main relay

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Ignition +15
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Ignition +15
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Ignition +15
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Power supply
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Power supply
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Power supply
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Engine speed
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Engine speed
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Engine speed
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Vehicle speed
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Vehicle speed
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Vehicle speed
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Air mass meter
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Air mass meter
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air mass meter
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Inlet manifold pressure
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Inlet manifold pressure
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Inlet manifold pressure
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Accelerator pedal sensor 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Accelerator pedal sensor 1
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Accelerator pedal sensor 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Accelerator pedal sensor 2
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Accelerator pedal sensor 2
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Accelerator pedal sensor 2
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Throttle position sensor 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Throttle position sensor 1
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Throttle position sensor 1
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Throttle position sensor 2
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Throttle position sensor 2
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Throttle position sensor 2
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Carbon filter solenoid valve
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Carbon filter solenoid valve
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Carbon filter solenoid valve
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fuel pressure
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Fuel pressure
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Fuel pressure
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Injection time
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Injection time
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Injection time
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Engine torque
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Engine torque
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Engine torque
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Knock sensor
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Knock sensor
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Knock sensor
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Lambda sensor 1 integrator

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Lambda sensor 1 integrator
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Lambda sensor 1 integrator
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Lambda probe 1, bank 1
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Lambda probe 1, bank 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Lambda probe 1, bank 1
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Lambda probe 2, bank 1
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Lambda probe 2, bank 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Lambda probe 2, bank 1
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Driving cycle
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Driving cycle
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Driving cycle
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 1
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Misfire cyl. 1
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Misfire cyl. 2
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 2
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 2
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 3
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 3
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Misfire cyl. 3
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 4
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Misfire cyl. 4
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 4
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Ignition key position
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Ignition key position
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Ignition key position
9-3 II	Engine Petrol	2.0t Trionic T8	Live Parameters	Coolant temperature
9-3 II	Engine Petrol	2.0T Trionic T8	Live Parameters	Coolant temperature
9-3 II	Engine Petrol	1.8 T Trionic T8	Live Parameters	Coolant temperature
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	Check engine lamp
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	Check engine lamp
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	Check engine lamp
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	AC-relay
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	AC-relay
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	AC-relay
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	Cooling fan
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	Cooling fan
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	Cooling fan
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	Injection valve 1
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	Injection valve 1
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	Injection valve 1
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	Injection valve 2
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	Injection valve 2
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	Injection valve 2
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	Injection valve 3
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	Injection valve 3

Saab/Model	System	ECU	Feature	Definition
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	Injection valve 3
9-3 II	Engine Petrol	1.8 T Trionic T8	Tests	Injection valve 4
9-3 II	Engine Petrol	2.0t Trionic T8	Tests	Injection valve 4
9-3 II	Engine Petrol	2.0T Trionic T8	Tests	Injection valve 4
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Programming date
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnostic version
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnosis identity
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software version number
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware version
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-3 II	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware version
9-3 II	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear detected
9-3 II	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sensor 1
9-3 II	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sentronic (Gear Shift Pads)
9-3 II	Gearbox / Automatic Transmission	Gearbox	Live Parameters	ATF temperature
9-3 II	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sensor 1
9-3 II	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sensor 2
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Serial number
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Diagnostic version
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Diagnosis identity
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Software version number
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Part number
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Hardware version
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Software version number
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Part number
9-3 II	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Hardware version
9-3 II	Gearbox / Automatic Transmission	Shift lever module	Live Parameters	Shift lever position sensor AT
9-3 II	Gearbox / Automatic Transmission	Shift lever module	Live Parameters	Winter program
9-3 II	Gearbox / Automatic Transmission	Shift lever module	Tests	LED
9-3 II	Gearbox / Automatic Transmission	Shift lever module	Tests	Shift lock function
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Diagnostic version
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Diagnosis identity
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Software version number
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Part number
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Hardware version
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Software version number
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Part number
9-3 II	Headlight	AHL - Automatic Headlamp Level	ECU Information	Hardware version
9-3 II	Headlight	AHL - Automatic Headlamp Level	Live Parameters	Battery voltage
9-3 II	Headlight	AHL - Automatic Headlamp Level	Live Parameters	Brake pedal switch
9-3 II	Headlight	AHL - Automatic Headlamp Level	Live Parameters	Low beam switch
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Serial number
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	VIN code
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Programming date
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Diagnostic version

Saab/Model	System	ECU	Feature	Definition
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Diagnosis identity
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Software version number
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Part number
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Hardware version
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Software version number
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Part number
9-3 II	Immobiliser	CIM - Steering column module	ECU Information	Hardware version
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	Programmed keys
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	Engine Immobiliser authorisation
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	Key (transponder) status
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	Vehicle Security Access Status
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	Security code
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	Security wait time
9-3 II	Immobiliser	CIM - Steering column module	Live Parameters	VIN code
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Serial number
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	VIN code
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Programming date
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Diagnostic version
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Diagnosis identity
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Software version number
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Part number
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Hardware version
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Software version number
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Part number
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Hardware version
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	System locked
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Net activity
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Number of ECU's in the MOST network
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"Customize" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"Clear" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Button for night panel
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	1 button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	2 button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	3 button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	4 button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	5 button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	6 button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	Radio
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"TP" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"AS" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"SCAN" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	'Settings' button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"DISC" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"SEEK <<" button
9-3 II	Instrument / Dashboard	ICM - Instrument	Live Parameters	"SEEK >>" button
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Serial number

Saab/Model	System	ECU	Feature	Definition
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	VIN code
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Programming date
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Diagnostic version
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Diagnosis identity
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Software version number
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Part number
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Hardware version
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Software version number
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Part number
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Hardware version
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Vehicle speed
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Engine speed
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Turbo
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Coolant temperature
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Odometer
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Trip meter
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	High beam switch
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Foglight
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Rear foglight
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Left hand indicator information
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Right hand indicator information
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Seatbelt warning lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Brake fluid level lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Parking brake lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	ABS indicator lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Traction off indicator light
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	TCS/ESP warning lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Headlights
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Cruise control lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Cruise control switch operating state
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Glow time lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Min fuel level lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Warning light
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Information
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	SRS warning lamp
9-3 II	Instrument / Dashboard	MIU - Instrument	Live Parameters	Oil pressure lamp
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Serial number
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Configuration
9-3 II	Parking System	SPA - Parking assistance	ECU Information	System name
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Programming date
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Diagnostic version
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Software number 1
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Part number
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Module part base number
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Software number 1

Saab/Model	System	ECU	Feature	Definition
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Part number
9-3 II	Parking System	SPA - Parking assistance	ECU Information	Module part base number
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Parking brake switch
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Trailer existence status
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Battery voltage
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Supply voltage sensors
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor outer left
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor center left
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor center right
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor outer right
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance to Closest Object Left
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance to Closest Object Center
9-3 II	Parking System	SPA - Parking assistance	Live Parameters	Distance to Closest Object Right
9-3 II	Restraints	Airbag	ECU Information	Diagnostic version
9-3 II	Restraints	Airbag	ECU Information	Diagnosis identity
9-3 II	Restraints	Airbag	ECU Information	Software version number
9-3 II	Restraints	Airbag	ECU Information	Part number
9-3 II	Restraints	Airbag	ECU Information	Hardware version
9-3 II	Restraints	Airbag	ECU Information	Software version number
9-3 II	Restraints	Airbag	ECU Information	Part number
9-3 II	Restraints	Airbag	ECU Information	Hardware version
9-3 II	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 1, Front driver side
9-3 II	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 2, Front driver side
9-3 II	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 1, Front passenger side
9-3 II	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 2, Front passenger side
9-3 II	Restraints	Airbag	Live Parameters	Driver's pretensioner resistance
9-3 II	Restraints	Airbag	Live Parameters	Passenger Front Belt Pretensioner
9-3 II	Restraints	Airbag	Live Parameters	Driver's side airbag resistance
9-3 II	Restraints	Airbag	Live Parameters	Passenger side airbag
9-3 II	Restraints	Airbag	Live Parameters	Curtain airbag resistance, driver side
9-3 II	Restraints	Airbag	Live Parameters	Curtain airbag resistance, passenger side
9-3 II	Restraints	Airbag	Live Parameters	Driver Seat in Forward Position
9-3 II	Restraints	Airbag	Live Parameters	Front Passenger Seat in Forward Position
9-3 II	Restraints	Airbag	Live Parameters	Front passenger seatbelt
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Diagnostic version
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Diagnosis identity
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Software version number
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Part number
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Hardware version
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Front LH Tyre pressure
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Front RH Tyre pressure
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Rear RH Tyre pressure
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Rear LH Tyre pressure
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the front left hand valve
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the front right hand valve
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the rear right hand valve

Saab/Model	System	ECU	Feature	Definition
9-3 II	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the rear left hand valve
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Serial number
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Diagnostic version
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Diagnosis identity
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Software version number
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Part number
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	ECU Information	Hardware version
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Heater blower output
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Flame detected
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Start attempts, too many failed attempts
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Overheat protection thermostat, too high signal
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Circulation pump
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Heater power
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Fuel pump
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Glow plug
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Coolant temperature
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Coolant temperature
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Flame sensor
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Heater
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Starter condition
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Starter condition
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Cooling fan
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Glow plug
9-3 II FL	Additional/Stationary Heater	AHM - Additional heater	Live Parameters	Glow plug
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Serial number
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	VIN code
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Programming date
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Diagnostic version
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Diagnosis identity
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Software version number
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Part number
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Hardware version
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Software version number
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Part number
9-3 II FL	Body Control Module	BCM - Body control module	ECU Information	Hardware version
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Left Front Door Lock Switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Right Front Door Lock Switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Rear left door ajar switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Rear right door ajar switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Trunk Handle Switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Trunk lid switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Hood Ajar Switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Glass break sensor detection
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Light switch, position 1
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Light switch, position 2
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Hazard Light Switch

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Front fogs switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Rear fog lights switch
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Power supply
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Day
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Time
9-3 II FL	Body Control Module	BCM - Body control module	Live Parameters	Security code
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Serial number
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	VIN code
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Programming date
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Diagnostic version
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Diagnosis identity
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Software version number
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Part number
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Hardware version
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Software version number
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Part number
9-3 II FL	Body Control Module	CIM - Column Integrated Module	ECU Information	Hardware version
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Configuration
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Cruise control
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Rain sensor
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	With rear wiper
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Automatic gearbox
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Sentronic (Gear Shift Pads)
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Steering Wheel Buttons
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Control unit power supply
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Key
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Wiper stalk position
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Switch, direction indicator
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	High beam switch
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Set cruise acceleration (+)
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Set cruise deceleration (-)
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Cruise control switch
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Steering angle
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Steering angle sensor
9-3 II FL	Body Control Module	CIM - Column Integrated Module	Live Parameters	Vehicle speed
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Reverse Gear (Manual Transmission)
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Low fluid level
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Left high beam
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Right high beam
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Left low beam
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Right low beam
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Turn indicator front left side
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Direction indicator lamp, front left
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Turn indicator front right side
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Direction indicator lamp, front right
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Front left fog light

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Front right fog light
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Auxiliary driving lamps relay
9-3 II FL	Body Control Module	UEC - Underhood electronic center	Live Parameters	Headlamp washer relay
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Serial number
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Programming date
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Diagnostic version
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Diagnosis identity
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Software version number
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Part number
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Hardware version
9-3 II FL	Body Control Module	REC - Rear electrical centre	ECU Information	Software version number
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Battery voltage
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Brake light switch
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Ignition on
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Lock contact, trunk lid
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Luggage space lighting
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Rear window heating
9-3 II FL	Body Control Module	REC - Rear electrical centre	Live Parameters	Rear wiper requested
9-3 II FL	Brake System	ABS/TC/ESP	Adaptations	Steering angle calibration
9-3 II FL	Brake System	ABS/TC/ESP	ECU Information	Serial number
9-3 II FL	Brake System	ABS/TC/ESP	ECU Information	Diagnostic version
9-3 II FL	Brake System	ABS/TC/ESP	ECU Information	Diagnosis identity
9-3 II FL	Brake System	ABS/TC/ESP	ECU Information	Software version number
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Inlet valve RR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Outlet valve RR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Inlet valve LR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Outlet valve LR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Inlet valve RF
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Outlet valve RF
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Inlet valve LF
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Outlet valve LF
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	TCS/ESP shut-off valve RF/LR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	TCS/ESP feeding valve RF/LR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	TCS/ESP shut-off valve LF/RR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	TCS/ESP feeding valve LF/RR
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Battery voltage
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	ABS indicator lamp
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	ESP off switch
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	TCS/ESP Active Indication
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Brake light switch
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Wheel speed, left front
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Wheel speed, right front
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Wheel speed, left rear
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Wheel speed, right rear
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Pump Feed
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Valve Feed

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Yaw rate
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Lateral acceleration sensor
9-3 II FL	Brake System	ABS/TC/ESP	Live Parameters	Brake pedal pressure
9-3 II FL	Climate Control	Climate control system	ECU Information	Serial number
9-3 II FL	Climate Control	Climate control system	ECU Information	Part number
9-3 II FL	Climate Control	Climate control system	ECU Information	Hardware version
9-3 II FL	Climate Control	Climate control system	ECU Information	Software version number
9-3 II FL	Climate Control	Climate control system	ECU Information	Part number
9-3 II FL	Climate Control	Climate control system	ECU Information	Hardware version
9-3 II FL	Climate Control	Climate control system	Live Parameters	Compartment temperature sensor
9-3 II FL	Climate Control	Climate control system	Live Parameters	Solar sensor left side
9-3 II FL	Climate Control	Climate control system	Live Parameters	Solar sensor right side
9-3 II FL	Climate Control	Climate control system	Live Parameters	Compartment temperature sensor
9-3 II FL	Climate Control	Climate control system	Live Parameters	Fan feedback
9-3 II FL	Climate Control	Climate control system	Live Parameters	Button pushed
9-3 II FL	Climate Control	Climate control system	Live Parameters	Cooling fan control (PWM)
9-3 II FL	Climate Control	Climate control system	Live Parameters	Defrosting flap motor
9-3 II FL	Climate Control	Climate control system	Live Parameters	Damper motor, ventilation
9-3 II FL	Climate Control	Climate control system	Live Parameters	Damper motor, floor
9-3 II FL	Climate Control	Climate control system	Live Parameters	Recirculation status
9-3 II FL	Climate Control	Climate control system	Live Parameters	Defrosting requested
9-3 II FL	Climate Control	Climate control system	Live Parameters	Solar Sensor Front
9-3 II FL	Climate Control	Climate control system	Live Parameters	Solar Sensor Rear
9-3 II FL	Climate Control	Climate control system	Live Parameters	Solar Sensor Top
9-3 II FL	Door	DDM - Driver door module	ECU Information	Serial number
9-3 II FL	Door	DDM - Driver door module	ECU Information	Programming date
9-3 II FL	Door	DDM - Driver door module	ECU Information	Diagnostic version
9-3 II FL	Door	DDM - Driver door module	ECU Information	Diagnosis identity
9-3 II FL	Door	DDM - Driver door module	ECU Information	Software version number
9-3 II FL	Door	DDM - Driver door module	ECU Information	Part number
9-3 II FL	Door	DDM - Driver door module	ECU Information	Hardware version
9-3 II FL	Door	DDM - Driver door module	ECU Information	Software version number
9-3 II FL	Door	DDM - Driver door module	ECU Information	Part number
9-3 II FL	Door	DDM - Driver door module	ECU Information	Hardware version
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Driver window down
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Driver window up
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Passenger window down
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Passenger window up
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Window rear left, down
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Window rear left, up
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Window rear right, down
9-3 II FL	Door	DDM - Driver door module	Live Parameters	Window rear right, up
9-3 II FL	Door	PDM - Passanger door module	ECU Information	Serial number
9-3 II FL	Door	PDM - Passanger door module	ECU Information	VIN code
9-3 II FL	Door	PDM - Passanger door module	ECU Information	Programming date
9-3 II FL	Door	PDM - Passanger door module	ECU Information	Diagnostic version

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Diagnosis identity
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Software version number
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Part number
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Hardware version
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Software version number
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Part number
9-3 II FL	Door	PDM - Passenger door module	ECU Information	Hardware version
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Serial number
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Programming date
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Diagnostic version
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Diagnosis identity
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Software version number
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Part number
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Hardware version
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Software version number
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Part number
9-3 II FL	Door	RLDM - Rear left door module	ECU Information	Hardware version
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Serial number
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Programming date
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Diagnostic version
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Diagnosis identity
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Software version number
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Part number
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Hardware version
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Software version number
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Part number
9-3 II FL	Door	RRDM - Rear right door module	ECU Information	Hardware version
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Adaptations	Replace the fuel pressure sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Adaptations	Particle filter replaced
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Adaptations	Particle filter pressure sensor replaced
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Adaptations	Pre catalyst replaced
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Adaptations	Lambda sensor change
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Adaptations	Particle filter regeneration
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	ECU Information	VIN code
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	ECU Information	Diagnostic version
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	ECU Information	Hardware number
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Immobiliser
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Immobiliser function not programmed
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Security code
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Incorrect security code entered
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fan control output 1
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fan control output 2
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fan control output 3
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Brake light switch
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Brake pedal switch
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Clutch pedal switch

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Oil level switch
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Oil pressure switch
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Accelerator pedal released
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Glowing
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Glow feedback
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel pump relay
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Ignition +15
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Engine rpm sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Desired idle speed
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Wheel speed, left front
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Battery voltage
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Coolant temperature
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Coolant temperature sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Intake air temperature
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Intake air temperature
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Air mass flow
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Accelerator pedal
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Accelerator Pedal Position sensor 1
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Accelerator Pedal Position Sensor 2
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Manifold absolute pressure demanded
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Manifold absolute pressure
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Manifold absolute pressure
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	EGR specified position
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	EGR actuator
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Atmospheric pressure
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Atmospheric pressure sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Engine torque
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Requested torque (traction control)
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust particle filter pressure
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust particle filter pressure sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust temperature 1
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust temperature Sensor 1
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust temperature 2
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust temperature Sensor 2
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel temperature
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel temperature sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Camshaft sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Current injected quantity
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Main injection timing
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Target fuel pressure
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel pressure sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel pressure sensor
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Swirl actuator
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Throttle actuator
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Exhaust particle filter soot density
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Content of soot in the particle emission filter

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Distance travelled since last regeneration
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Particle filter regeneration
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Odometer
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Pressure regulator valve
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Pressure regulator valve
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel Metering Solenoid Valve
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Live Parameters	Fuel Metering Solenoid Valve
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Tests	Fan control output 1
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Tests	Fan control output 2
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Tests	Fan control output 3
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Tests	Glowing
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Tests	Fuel pump relay
9-3 II FL	Engine Diesel	1.9 TiD - Z19DT EDC16	Tests	Fuel pre heating
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Adaptations	Reset adaption
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Adaptations	Throttle learning
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	ECU Information	VIN
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	ECU Information	Diagnostic version
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	ECU Information	Part number
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	ECU Information	Hardware number
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Engine coolant temperature at engine start.
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Intake air temperature
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Ignition +15
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Ignition +X
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Throttle Position Sensor 1 Adapted Closed Position
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Throttle Position Sensor 2 Adapted Closed Position
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Calculated engine load
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Calculated coolant temperature
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Engine rpm sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Oil level switch
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Fuel pressure sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Lambda sensor 2
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Charge air absolute pressure
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Atmospheric pressure
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Accelerator Pedal Position sensor 1
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Accelerator Pedal Position Sensor 2
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Fuel level
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Pedal position
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Knock Sensor Bank 1
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Coolant temperature
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Mass air flow sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Oil pressure sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Oxygen Sensor 1, Preheating
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Knock Sensor Bank 2
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Air mass flow
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Intake cam angle bank 1
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Intake cam angle bank 2

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Fuel level sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Requested Oxygen Sensor 1 Lambda
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Oxygen Sensor 1 Lambda
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	O2S 2 Preheating
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Atmospheric pressure sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	A/C pressure
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Secondary Air Injection Pressure Sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Live Parameters	Secondary Air Injection System Pressure Sensor
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Check engine lamp
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Injector 1
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Injector 2
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Injector 3
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Injector 4
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Injector 5
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Injector 6
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Fan control output 1
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Fan control output 2
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Fan control output 3
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Charge air cooler bypass valve
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Intake Cam Angle Solenoid Bank 1
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	Intake Cam Angle Solenoid Bank 2
9-3 II FL	Engine Petrol	2.8 V6 Motronic ME9.6	Tests	AC relay
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Adaptations	Reset adaption
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Adaptations	Reset Misfire and Knock Counters
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Serial number
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	VIN code
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Programming date
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Diagnostic version
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Diagnosis identity
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 3
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Software number 4
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Hardware
9-3 II FL	Engine Petrol	1.8 T Trionic T8	ECU Information	Part number
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Throttle position sensor 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Accelerator Pedal Position sensor 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Accelerator Pedal Position Sensor 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Brake light switch
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Throttle position sensor 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Engine rpm sensor
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Atmospheric pressure
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Ignition +15
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Charge air absolute pressure
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Manifold absolute pressure
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Tank pressure

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oil pressure switch
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air mass flow
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Intake air temperature
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Battery voltage
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Coolant temperature
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Combustion Signal cylinder 1+3
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Combustion Signal cylinder 2+4
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Ignition +X
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Lambda sensor 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Lambda sensor 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Ignition key position
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Power steering pressure switch
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Front wheels average speed
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Wheel speed, left rear
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Charge air control valve
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fuel pump relay
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Brake pedal switch
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Short term fuel trim
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Engine oil temperature
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air mass/combustion
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air mass/combustion calculated
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Multiplicative Fuel Adaption
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Canister Close Valve Circuit
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Check engine lamp
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 3
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Misfire cyl. 4
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Main relay
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Secondary air valve relay
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air mass flow control
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Charge air cooler bypass valve
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Short term fuel trim
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Engine torque
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	IAC - Idle actuator control
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Throttle opening
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Ignition timing
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Transmission max engine torque
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Injection, final angle
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Evap-valve
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Injection duration
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Turbo charging pressure

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fan control output 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fan control output 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fan control output 3
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air mass / Combustion Requested
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Crank Position Lost Counter
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Air Mass Demand Status
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Knock sensor cylinder 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Knock sensor cylinder 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Knock sensor cylinder 3
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Knock sensor cylinder 4
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Fuel Cut Condition
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Accelerator pedal released
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Live Parameters	Camshaft position synchronised
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Charge air control valve
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Check engine lamp
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Fuel pump
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Oxygen-sensor heater 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Oxygen-sensor heater 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Purge control valve
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Fan
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Throttle position
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	AC relay
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Cylinder 1 ignition coil circuit
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Cylinder 2 ignition coil circuit
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Cylinder 3 ignition coil circuit
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Cylinder 4 ignition coil circuit
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Injector 1
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Injector 2
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Injector 3
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Injector 4
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Charge air cooler bypass valve
9-3 II FL	Engine Petrol	1.8 T Trionic T8	Tests	Canister Close Valve Circuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Adaptations	Reset adaption
9-3 II FL	Engine Petrol	2.0T Trionic T8	Adaptations	Reset Misfire and Knock Counters
9-3 II FL	Engine Petrol	2.0T Trionic T8	ECU Information	VIN code
9-3 II FL	Engine Petrol	2.0T Trionic T8	ECU Information	Diagnostic version
9-3 II FL	Engine Petrol	2.0T Trionic T8	ECU Information	Diagnosis identity
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Throttle position sensor 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Accelerator Pedal Position sensor 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Accelerator Pedal Position Sensor 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Brake light switch
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Throttle position sensor 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Engine rpm sensor
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Atmospheric pressure
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Ignition +15
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Charge air absolute pressure

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Manifold absolute pressure
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Tank pressure
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Oil pressure switch
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Air mass flow
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Intake air temperature
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Battery voltage
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Coolant temperature
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Combustion Signal cylinder 1+3
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Combustion Signal cylinder 2+4
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Ignition +X
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Lambda sensor 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Lambda sensor 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Ignition key position
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Power steering pressure switch
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Front wheels average speed
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Wheel speed, left rear
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Charge air control valve
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Oxygen-sensor heater 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Fuel pump relay
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Brake pedal switch
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Short term fuel trim
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Oxygen-sensor heater 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Engine oil temperature
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Air mass/combustion
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Air mass/combustion calculated
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Multiplicative Fuel Adaption
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Canister Close Valve Circuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Check engine lamp
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 3
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Misfire cyl. 4
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Main relay
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Secondary air valve relay
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Air mass flow control
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Charge air cooler bypass valve
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Short term fuel trim
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Engine torque
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	IAC - Idle actuator control
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Throttle opening
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Ignition timing
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Transmission max engine torque
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Injection, final angle
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Evap-valve

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Injection duration
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Turbo charging pressure
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Fan control output 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Fan control output 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Fan control output 3
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Air mass / Combustion Requested
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Crank Position Lost Counter
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Air Mass Demand Status
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Knock sensor cylinder 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Knock sensor cylinder 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Knock sensor cylinder 3
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Knock sensor cylinder 4
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Fuel Cut Condition
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Accelerator pedal released
9-3 II FL	Engine Petrol	2.0T Trionic T8	Live Parameters	Camshaft position synchronised
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Charge air control valve
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Check engine lamp
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Fuel pump
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Oxygen-sensor heater 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Oxygen-sensor heater 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Purge control valve
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Fan
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Throttle position
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	AC relay
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Cylinder 1 ignition coil cicuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Cylinder 2 ignition coil cicuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Cylinder 3 ignition coil cicuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Cylinder 4 ignition coil cicuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Injector 1
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Injector 2
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Injector 3
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Injector 4
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Charge air cooler bypass valve
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Canister Close Valve Circuit
9-3 II FL	Engine Petrol	2.0T Trionic T8	Tests	Secondary Air Injection System Relay
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Adaptations	Resetting adaptive values automatic gearbox.
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Programming date
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnostic version
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnosis identity
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software version number
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware version
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware version
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	ATF temperature
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear engaged

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Check Engine request
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear selector, position
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sentronic Shift Request
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Vehicle speed (output speed)
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gearbox input rpm
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Shift Level Sentronic
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Transmission Range Sensor 1
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Transmission Range Sensor 2
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Transmission Range Sensor 1. Deviation at Last Calibration
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	ATF temp sensor
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	S1 Commanded Status
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	S2 Commanded Status
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	Linear Solenoid Valve - Load (SLT), Commanded Current
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	Linear solenoid valve - torque converter clutch (SLU) Commanded Current
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	Linear solenoid valve - clutch 1 (SLC1), Commanded Current
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	Linear solenoid valve - clutch 2 (SLC2), Commanded Current
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	Linear solenoid valve - clutch 3 (SLC3), Commanded Current
9-3 II FL	Gearbox / Automatic Transmission	Gearbox	Tests	Linear solenoid valve - clutch 4 (SLC4), Commanded Current
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Serial number
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Diagnostic version
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Diagnosis identity
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Software version number
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Part number
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Hardware version
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Software version number
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Part number
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	ECU Information	Hardware version
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	Live Parameters	Shift lever position sensor AT
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	Live Parameters	Winter program
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	Tests	LED
9-3 II FL	Gearbox / Automatic Transmission	Shift lever module	Tests	Shift lock function
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Diagnostic version
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Diagnosis identity
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Software version number
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Part number
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Hardware version
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Software version number
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Part number
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	ECU Information	Hardware version
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	Live Parameters	Battery voltage
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	Live Parameters	Brake pedal switch
9-3 II FL	Headlight	AHL - Automatic Headlamp Level	Live Parameters	Low beam switch
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Serial number
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	VIN code
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Programming date
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Diagnostic version

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Diagnosis identity
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Software version number
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Part number
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Hardware version
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Software version number
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Part number
9-3 II FL	Immobiliser	CIM - Steering column module	ECU Information	Hardware version
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	Programmed keys
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	Engine Immobiliser authorisation
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	Key (transponder) status
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	Vehicle Security Access Status
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	Security code
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	Security wait time
9-3 II FL	Immobiliser	CIM - Steering column module	Live Parameters	VIN code
9-3 II FL	Infotainment	Radio	ECU Information	Diagnosis identity
9-3 II FL	Infotainment	Radio	Live Parameters	Button pushed
9-3 II FL	Infotainment	Radio	Live Parameters	Radio band
9-3 II FL	Infotainment	Radio	Live Parameters	Theft protection
9-3 II FL	Infotainment	Radio	Live Parameters	Audio source
9-3 II FL	Infotainment	Radio	Live Parameters	Volume
9-3 II FL	Infotainment	Radio	Live Parameters	Bass
9-3 II FL	Infotainment	Radio	Live Parameters	Midrange
9-3 II FL	Infotainment	Radio	Live Parameters	Treble
9-3 II FL	Infotainment	Radio	Live Parameters	Fader
9-3 II FL	Infotainment	Radio	Live Parameters	Balance
9-3 II FL	Infotainment	Radio	Live Parameters	Antenna signal
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Speedometer
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Tachometer
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Main Instrument Unit Coolant Temperature
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level gauge sensor
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Parking brake lamp
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Brake fluid level lamp
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	ABS indicator lamp
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Seat belt lamp
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Indication lamp seat belt, passenger
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Main beam indicator lamp
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Turn indicator, left
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Turn indicator, right
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Rear fog lamp indicator lamp
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Front fog lamp indicator
9-3 II FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Light sensor
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Pump motor
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Rear Wheel Drive Solenoid
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Differential Solenoid
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	ECU temperature

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Rear Wheel Drive Clutch Calculated Temperature
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Differential Calculated Temperature
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Disable Rear Wheel Drive
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Ignition Cycles Since Last Rear Wheel Drive Disabled
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Differential Disabled
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Ignition Cycled Since Last Differential Disabled
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Rear Wheel Drive Operating Status
9-3 II FL	Other	AWD - All Wheel Drive	Live Parameters	Differential Operating
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Speed limitation
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Serial number
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Diagnostic version
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Diagnosis identity
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Software version number
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Part number
9-3 II FL	Overhead	STC - Soft Top Control	ECU Information	Hardware version
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Switch open
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Switch closed
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Hydraulic pump
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Solenoid valve 1
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Solenoid valve 2
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Solenoid valve 3
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Solenoid valve 4
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Cargo Carrier installed right
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Cargo Carrier installed left
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Rollover bar, right
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Rollover bar, left
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tonneau Cover latched right
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tonneau Cover latched left
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tonneau Cover up
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tension Bow BuggyLink Latched right
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tension Bow BuggyLink Latched left
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tension Bow up
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Header down
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Header up
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Header latched right
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Header latched left
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Control unit in operational mode
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Hallsensor
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Tension Bow Intermediate
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Header Center Latch
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Softtop movment
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Bootwell/BLN
9-3 II FL	Overhead	STC - Soft Top Control	Live Parameters	Battery voltage
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Serial number
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Configuration
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	System name

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Programming date
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Diagnostic version
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Software number 1
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Part number
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Module part base number
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Software number 1
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Part number
9-3 II FL	Parking System	SPA - Parking assistance	ECU Information	Module part base number
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Parking brake switch
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Trailer existence status
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Battery voltage
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Supply voltage sensors
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor outer left
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor center left
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor center right
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance, sensor outer right
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance to Closest Object Left
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance to Closest Object Center
9-3 II FL	Parking System	SPA - Parking assistance	Live Parameters	Distance to Closest Object Right
9-3 II FL	Restraints	Airbag	ECU Information	Diagnostic version
9-3 II FL	Restraints	Airbag	ECU Information	Diagnosis identity
9-3 II FL	Restraints	Airbag	ECU Information	Software version number
9-3 II FL	Restraints	Airbag	ECU Information	Part number
9-3 II FL	Restraints	Airbag	ECU Information	Hardware version
9-3 II FL	Restraints	Airbag	ECU Information	Software version number
9-3 II FL	Restraints	Airbag	ECU Information	Part number
9-3 II FL	Restraints	Airbag	ECU Information	Hardware version
9-3 II FL	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 1, Front driver side
9-3 II FL	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 2, Front driver side
9-3 II FL	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 1, Front passenger side
9-3 II FL	Restraints	Airbag	Live Parameters	Airbag circuit - Loop 2, Front passenger side
9-3 II FL	Restraints	Airbag	Live Parameters	Driver's pretensioner resistance
9-3 II FL	Restraints	Airbag	Live Parameters	Passenger Front Belt Pretensioner
9-3 II FL	Restraints	Airbag	Live Parameters	Driver's side airbag resistance
9-3 II FL	Restraints	Airbag	Live Parameters	Passenger side airbag
9-3 II FL	Restraints	Airbag	Live Parameters	Curtain airbag resistance, driver side
9-3 II FL	Restraints	Airbag	Live Parameters	Curtain airbag resistance, passenger side
9-3 II FL	Restraints	Airbag	Live Parameters	Driver Seat in Forward Position
9-3 II FL	Restraints	Airbag	Live Parameters	Front Passenger Seat in Forward Position
9-3 II FL	Restraints	Airbag	Live Parameters	Front passenger seatbelt
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Diagnostic version
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Diagnosis identity
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Software version number
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Part number
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	ECU Information	Hardware version
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Front LH Tyre pressure

Saab/Model	System	ECU	Feature	Definition
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Front RH Tyre pressure
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Rear RH Tyre pressure
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Rear LH Tyre pressure
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the front left hand valve
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the front right hand valve
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the rear right hand valve
9-3 II FL	Tyre Pressure	TPM - Tyre pressure monitoring	Live Parameters	Status of the rear left hand valve
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	VIN code
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Part number
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Hardware
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Software version number
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	AC
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Cooling fan low speed
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Cooling fan high speed
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Ignition +15
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Engine running
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Evaporator temperature
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Battery voltage
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Coolant temperature
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	A/C pressure
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Left hand indicator relay
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Right hand indicator relay
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rear fog lights
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Front fog lights
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Main beam
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Dipped beam
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Hazard warning flashers
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rheostat
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Interior lighting
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Luggage space lighting
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Driver's door
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Passenger door
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Right rear door
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Left rear door
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Button for night panel
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Windscreen wiper intermittent setting
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rear window heating
9-5 I	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Fuel pressure when the engine was cut-off
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Front left wheel speed sensor
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Front right wheel speed sensor
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Rear left wheel speed sensor
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Rear right wheel speed sensor
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Brake light switch
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Sensor fault output
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Battery voltage
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Engine torque

Saab/Model	System	ECU	Feature	Definition
9-5 I	Brake System	Bosch 5.3/TC	Live Parameters	Engine speed
9-5 I	Brake System	Bosch 5.4	Live Parameters	Front left wheel speed sensor
9-5 I	Brake System	Bosch 5.4	Live Parameters	Front right wheel speed sensor
9-5 I	Brake System	Bosch 5.4	Live Parameters	Rear left wheel speed sensor
9-5 I	Brake System	Bosch 5.4	Live Parameters	Rear right wheel speed sensor
9-5 I	Brake System	Bosch 5.4	Live Parameters	Brake light switch
9-5 I	Brake System	Bosch 5.4	Live Parameters	Sensor fault output
9-5 I	Brake System	Bosch 5.4	Live Parameters	Battery voltage
9-5 I	Brake System	ABS/ESP	Adaptations	Steering angle calibration
9-5 I	Brake System	ABS/ESP	Live Parameters	Wheel sensor LF
9-5 I	Brake System	ABS/ESP	Live Parameters	Wheel sensor RF
9-5 I	Brake System	ABS/ESP	Live Parameters	Wheel sensor LR
9-5 I	Brake System	ABS/ESP	Live Parameters	Wheel sensor RR
9-5 I	Brake System	ABS/ESP	Live Parameters	Steering angle sensor
9-5 I	Brake System	ABS/ESP	Live Parameters	Yaw rate value
9-5 I	Brake System	ABS/ESP	Live Parameters	Brake pressure sensor
9-5 I	Brake System	ABS/ESP	Live Parameters	Lateral acceleration sensor
9-5 I	Brake System	ABS/ESP	Live Parameters	Brake light switch
9-5 I	Brake System	ABS/ESP	Live Parameters	Battery voltage
9-5 I	Brake System	ABS/ESP	Live Parameters	Sensor fault output
9-5 I	Brake System	ABS/ESP	Live Parameters	Engine speed
9-5 I	Brake System	ABS/ESP	Live Parameters	Engine torque
9-5 I	Brake System	ABS/ESP	Live Parameters	Max engine torque
9-5 I	Brake System	ABS/ESP	Live Parameters	Accelerator pedal position sensor
9-5 I	Climate Control	Climate control system	ECU Information	VIN code
9-5 I	Climate Control	Climate control system	ECU Information	Part number
9-5 I	Climate Control	Climate control system	ECU Information	Hardware
9-5 I	Climate Control	Climate control system	ECU Information	Software version number
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature sensor left
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature sensor right
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Interior temperature sensor
9-5 I	Climate Control	Climate control system	Live Parameters	Coolant temperature
9-5 I	Climate Control	Climate control system	Live Parameters	Outside temperature
9-5 I	Climate Control	Climate control system	Live Parameters	AC compressor
9-5 I	Climate Control	Climate control system	Live Parameters	Compartment fan control power
9-5 I	Climate Control	Climate control system	Live Parameters	Air distribution valve
9-5 I	Climate Control	Climate control system	Live Parameters	AC
9-5 I	Climate Control	Climate control system	Live Parameters	Recirculation flap position
9-5 I	Climate Control	Climate control system	Live Parameters	Heat exchanger
9-5 I	Climate Control	Climate control system	Live Parameters	Circulation pump
9-5 I	Climate Control	Climate control system	Live Parameters	Parking heater
9-5 I	Climate Control	Climate control system	Live Parameters	Compartment temperature
9-5 I	Climate Control	Climate control system	Live Parameters	Temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Temperature right

Saab/Model	System	ECU	Feature	Definition
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature sensor left
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature sensor right
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Sun sensor front cell
9-5 I	Climate Control	Climate control system	Live Parameters	Sun sensor right cell
9-5 I	Climate Control	Climate control system	Live Parameters	Sun sensor back cell
9-5 I	Climate Control	Climate control system	Live Parameters	Sun sensor left cell
9-5 I	Climate Control	Climate control system	Live Parameters	Sun sensor top cell
9-5 I	Climate Control	Climate control system	Live Parameters	Sun intensity
9-5 I	Climate Control	Climate control system	Live Parameters	Sun elevation
9-5 I	Climate Control	Climate control system	Live Parameters	Sun azimuth
9-5 I	Climate Control	Climate control system	Live Parameters	Sensor ground
9-5 I	Climate Control	Climate control system	Live Parameters	Coolant temperature
9-5 I	Climate Control	Climate control system	Live Parameters	Road speed signal
9-5 I	Climate Control	Climate control system	Live Parameters	Interior temperature sensor
9-5 I	Climate Control	Climate control system	Live Parameters	Compartement fan control power
9-5 I	Climate Control	Climate control system	Live Parameters	Air distribution valve
9-5 I	Climate Control	Climate control system	Live Parameters	Air distribution valve
9-5 I	Climate Control	Climate control system	Live Parameters	Rear window heating
9-5 I	Climate Control	Climate control system	Live Parameters	Outside temperature
9-5 I	Climate Control	Climate control system	Live Parameters	AC
9-5 I	Climate Control	Climate control system	Live Parameters	AC compressor
9-5 I	Climate Control	Climate control system	Live Parameters	Recirculation flap position
9-5 I	Climate Control	Climate control system	Live Parameters	Heat exchanger
9-5 I	Climate Control	Climate control system	Live Parameters	Circulation pump
9-5 I	Climate Control	Climate control system	Live Parameters	Button pushed
9-5 I	Climate Control	Climate control system	Live Parameters	Parking heater
9-5 I	Climate Control	Climate control system	Live Parameters	Temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Headroom temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Headroom temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Interior temperature sensor
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature left
9-5 I	Climate Control	Climate control system	Live Parameters	Compartement temperature
9-5 I	Climate Control	Climate control system	Live Parameters	Temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Headroom temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Headroom temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Headroom temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Mixed air temperature right
9-5 I	Climate Control	Climate control system	Live Parameters	Compartement temperature
9-5 I	Engine Diesel	3.0TiD - D308 Denso	ECU Information	VIN code
9-5 I	Engine Diesel	3.0TiD - D308 Denso	ECU Information	Part number
9-5 I	Engine Diesel	3.0TiD - D308 Denso	ECU Information	Hardware
9-5 I	Engine Diesel	3.0TiD - D308 Denso	ECU Information	Software number
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Battery voltage
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Engine speed

Saab/Model	System	ECU	Feature	Definition
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Coolant temperature
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Coolant temperature sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	MAF (Mass Air Flow)
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	MAF-sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	IAT - Intake air temperature
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	IAT-sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Engine torque
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Boost pressure sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Charge air pressure control
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Requested VNT (Variable Nozzle Turbine) position
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	VNT (Variable Nozzle Turbine) position
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	EGR-valve demand
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	EGR valve
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	EGR valve control
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	EGR valve opening
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	EGR valve sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Target fuel pressure
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Fuel pressure
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Fuel pressure sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Fuel temperature
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Fuel temp sensor
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Accelerator pedal position
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Pedal position track 1
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Pedal position track 2
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Manifold absolute pressure
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Glow time relay
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	AC-relay
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Torque reduction
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Vehicle speed
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Oil level gauge
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Fuel consumption signal
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Cruise control
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Cruise control switch, set/acceleration
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Cruise control switch, resume
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Cruise control; cancel switch
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Brake light switch
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Brake switch
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Live Parameters	Clutch switch
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Tests	AC-relay
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Tests	Glow time relay
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Tests	EGR valve
9-5 I	Engine Diesel	3.0TiD - D308 Denso	Tests	Boost pressure regulation
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	VIN code
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Part number
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Hardware
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	ECU Information	Software number

Saab/Model	System	ECU	Feature	Definition
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Battery voltage
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Engine speed
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Injection pump
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Vehicle speed
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	MAF (Mass Air Flow)
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	EGR-valve demand
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	EGR valve
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Swirl control valve SCV
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Coolant temperature
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Oil temperature
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Charge air pressure, duty factor
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Charge air pressure control
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Inlet air temperature
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Atmospheric pressure
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Fuel temperature
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Pedal position sensor
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Idle switch
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Accelerator pedal
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake light switch
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Ignition on
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Main relay
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Glow plug relay
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Glowplug pre-operation
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Cruise control switch, reset/off
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Clutch pedal switch
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Live Parameters	Brake switch
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Glow time lamp
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Glow time relay
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	AC-relay
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Swirl control valve SCV
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	EGR valve
9-5 I	Engine Diesel	2.2TiD - D223L PSG16	Tests	Charge air pressure control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Vehicle identification VIN
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Part number
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Hardware number
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Hardware version
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Software number
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Software version
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	System
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Programming date
9-5 I	Engine Petrol	3.0 V6 Trionic T7	ECU Information	Diagnosis identity
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Limp-home relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Evap-valve
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Main relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Fuel pump relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	AC-relay

Saab/Model	System	ECU	Feature	Definition
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Throttle position sensor 1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Kick-down
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	CHECK-ENGINE-lamp
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	SHIFT UP lamp
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Indicator lamp
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cruise control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Fuel consumed since start
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Engine torque
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Firing angle
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Injection, final angle
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Injection time
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	A/C requested
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Fuel pressure when the engine was cut-off
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cruise control switch
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cruise control switch
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cruise control switch
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Brake pedal-/clutch connector
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Throttle position sensor 1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Throttle position sensor 2
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Accelerator pedal sensor 2
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Accelerator pedal sensor 1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Revolution signal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Inlet pressure
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Atmospheric pressure
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Load pressure
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Lambda sensor 1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knock sensor
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Coolant temperature
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Air inlet temperature sensor
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Road speed signal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Road speed signal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Lambda probe heating (bank 1, sond 1)
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Combustion detection, Bank1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Combustion detection, Bank2
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Air mass meter
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Air mass/combustion
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Torque control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Torque control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Current consumption
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Main relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Brake pedal light
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Multiplicative lambda adaptation
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Additive adaption
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knocking, cyl.1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knocking, cyl.2
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knocking, cyl.3

Saab/Model	System	ECU	Feature	Definition
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knocking, cyl.4
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knocking, cyl.5
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knocking, cyl.6
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Misfiring
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Misfiring
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Misfiring
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Misfiring
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Misfiring
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Misfiring
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	EVAP system
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Lambda regulation
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Air mass/combustion
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Stored faultcode
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Accelerator pedal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cruise control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Basic load
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Idle control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Dash pot
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Max engine torque
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Manual transmission
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Automatic transmission
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Automatic transmission, reverse
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Automatic transmission
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	TCS
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Brake pedal light
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Knock control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Max vehicle speed
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Max engine speed
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Max turbo speed
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Idle control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Camshaft position synchronised
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Idle control
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cruise control was not used
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Clutch or brake switch was on
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Vehicle speed was below 40 km/h
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Vehicle speed was below 40 km/h
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	TCS was active
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Gear was disengaged
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Cancel was used
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Switch cruise control in OFF position or trouble code detected
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Switch cruise control in ON position and no trouble code detected
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	No brake light
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	No clutch or brake switch
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Vehicle speed above 40 km/h
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Vehicle speed above 40 km/h
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	No deceleration

Saab/Model	System	ECU	Feature	Definition
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	No TCS active
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Gear detected
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Switch in neutral position before on
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Lambda regulation
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Stored faultcode
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Engine revolutions since start to few
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	O2 sensor 1 not yet left 0,4 - 0,6V
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Coolant temp too low, released pedal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Coolant temp too low, pressed pedal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Load too high
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Load too low
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Engine speed too low
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Load transient and low coolant temperature
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Fuel shut off
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Stored faultcode
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Accelerator fully pressed during start
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Engine braking
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Engine speed too high
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Airmass/Combustion too high
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	+15 signal
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Limp-home relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Air mass/combustion calculated
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Live Parameters	Max permitted engine torque at current engine speed
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	AC-relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Bypass valve (turbo)
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Main relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Fuel pump relay
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Lambda probe heating (bank 1, sond 1)
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Injection valve 1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Injection valve 2
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Injection valve 3
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Injection valve 4
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Ignition coil 1
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Ignition coil 2
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Ignition coil 3
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Ignition coil 4
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Evap-valve
9-5 I	Engine Petrol	3.0 V6 Trionic T7	Tests	Charging pressure valve
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software version number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	System
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Programming date
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnosis identity
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sport program

Saab/Model	System	ECU	Feature	Definition
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Winter program
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sport lamp
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Winter lamp
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Kick down activated
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Brake light switch
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Check gearbox lamp
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid 1-2/3-4 (S1)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid 2-3 (S2)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid Lock-Up (SL)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Selector switch
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Actual gear
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Road speed sensor
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Accelerator pedal position
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Oil temperature
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Oil temperature
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine torque
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine speed
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Max permitted engine torque at current engine speed
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Input rpm signal
9-5 I	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid 1-2/3-4 (S1)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Tests	Set selector lever in position N.
9-5 I	Gearbox / Automatic Transmission	Gearbox	Tests	Set selector lever in position N.
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software version number
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	System
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Programming date
9-5 I	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnosis identity
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sport program
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Winter program
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sport lamp
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Winter lamp
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Kick down activated
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Brake light switch
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Check gearbox lamp
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid 1-2/3-4 (S1)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid 2-3 (S2)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid Lock-Up (SL)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Selector switch
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Actual gear
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Road speed sensor
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Accelerator pedal position
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Oil temperature
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Oil temperature
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine torque

Saab/Model	System	ECU	Feature	Definition
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine speed
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Max permitted engine torque at current engine speed
9-5 I	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Input rpm signal
9-5 I	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid 1-2/3-4 (S1)
9-5 I	Gearbox / Automatic Transmission	Gearbox	Tests	Set selector lever in position N.
9-5 I	Gearbox / Automatic Transmission	Gearbox	Tests	Set selector lever in position N.
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Part number
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Hardware number
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Software number
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Programming date
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Diagnostic version
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Front load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Rear load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Headlamp levelling motor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Calibration value rear load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Calibration value front load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Part number
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Hardware number
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Software number
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Programming date
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Diagnostic version
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Front load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Rear load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Headlamp levelling motor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Calibration value rear load angle sensor
9-5 I	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Calibration value front load angle sensor
9-5 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Part number
9-5 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Hardware
9-5 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Software number
9-5 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Software version number
9-5 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Programming date
9-5 I	Instrument / Dashboard	MIU - Instrument	ECU Information	Diagnostic version
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Vehicle speed
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Engine speed
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Coolant temperature
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel consumption
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Distance indicator
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Trip meter
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Display
9-5 I	Instrument / Dashboard	MIU - Instrument	Live Parameters	Button for night panel
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat Night Panel, Filtered
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	LCD Dimmer value
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Indoor light intensity
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Outside temperature sensor

Saab/Model	System	ECU	Feature	Definition
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Coolant fluid level sensor, low level
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Washer fluid level sensor, low level
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Front lamp failure
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Month
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Day
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Hour
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Minutes
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Seconds
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Horn
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Control unit in steering wheel
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Indoor light sensor
9-5 I	Instrument / Dashboard	SID - Info display	Live Parameters	Outside temperature sensor
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Ignition +15
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Belt buckle switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Hood switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Rear seat heater
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk key opening disarm switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Alarm sensors disable
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key unlock switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key lock switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver's door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk opening switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Central locking
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk lock motor
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Brake pedal light
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Parking light, rear left
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Parking light, rear right
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Road speed signal
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Outside temperature sensor
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Ignition +15
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Hood switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Rear seat heater
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk key opening disarm switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Alarm sensors disable
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key unlock switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key lock switch
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver's door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk opening switch

Saab/Model	System	ECU	Feature	Definition
9-5 I	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Outside temperature sensor
9-5 I	Parking System	SPA - Parking assistance	ECU Information	Manufacturer item number
9-5 I	Parking System	SPA - Parking assistance	ECU Information	Hardware number
9-5 I	Parking System	SPA - Parking assistance	ECU Information	ECU version
9-5 I	Parking System	SPA - Parking assistance	ECU Information	Software number
9-5 I	Parking System	SPA - Parking assistance	ECU Information	Software version
9-5 I	Parking System	SPA - Parking assistance	ECU Information	System name
9-5 I	Parking System	SPA - Parking assistance	ECU Information	Programming date
9-5 I	Parking System	SPA - Parking assistance	ECU Information	Diagnosis identity
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Left outer distance sensor
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Left center distance sensor
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Right center distance sensor
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Right outer distance sensor
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Distance to target object
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Manual on/off (Bus from SID)
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Body type (Bus from TWICE)
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Reverse gear (bus from DICE)
9-5 I	Parking System	SPA - Parking assistance	Live Parameters	Status
9-5 I	Restraints	Airbag	ECU Information	VIN code
9-5 I	Restraints	Airbag	ECU Information	Part number
9-5 I	Restraints	Airbag	ECU Information	Hardware version
9-5 I	Restraints	Airbag	ECU Information	Software version number
9-5 I	Restraints	Airbag	ECU Information	Programming date
9-5 I	Restraints	Airbag	ECU Information	Diagnostic version
9-5 I	Restraints	Airbag	Live Parameters	Driver airbag, stage 1
9-5 I	Restraints	Airbag	Live Parameters	Driver airbag, stage 2
9-5 I	Restraints	Airbag	Live Parameters	Airbag, passenger, stage 1
9-5 I	Restraints	Airbag	Live Parameters	Airbag, passenger, stage 2
9-5 I	Restraints	Airbag	Live Parameters	Side airbag squib circuit, driver side
9-5 I	Restraints	Airbag	Live Parameters	Side airbag squib circuit, passenger side
9-5 I	Restraints	Airbag	Live Parameters	Driver pretensioner
9-5 I	Restraints	Airbag	Live Parameters	Passenger pretensioner
9-5 I	Restraints	Airbag	Live Parameters	Driver seat position
9-5 I	Restraints	Airbag	Live Parameters	Passenger seat position sensor
9-5 I	Restraints	Airbag	Live Parameters	Seat belt buckle,driver
9-5 I	Restraints	Airbag	Live Parameters	Seat belt buckle,passenger
9-5 I	Restraints	Airbag	Live Parameters	SRS warning lamp
9-5 I	Restraints	Airbag	Live Parameters	Ignition circuit
9-5 I	Restraints	Airbag	Live Parameters	Passenger airbag
9-5 I	Restraints	Airbag	Live Parameters	Triggering of airbag
9-5 I	Restraints	Airbag	ECU Information	Part number
9-5 I	Restraints	Airbag	ECU Information	ECU ID
9-5 I	Restraints	Airbag	Live Parameters	Battery voltage
9-5 I	Restraints	Airbag	Live Parameters	Check lamp
9-5 I	Restraints	Airbag	Live Parameters	Driver airbag
9-5 I	Restraints	Airbag	Live Parameters	Passenger airbag

Saab/Model	System	ECU	Feature	Definition
9-5 I	Restraints	Airbag	Live Parameters	Driver pretensioner
9-5 I	Restraints	Airbag	Live Parameters	Passenger pretensioner
9-5 I	Restraints	Airbag	Live Parameters	Driver side airbag
9-5 I	Restraints	Airbag	Live Parameters	Passenger side airbag
9-5 I	SLR - Service light reset	Reset service	Adaptations	Recall service message
9-5 I	SLR - Service light reset	Reset service	Live Parameters	Month
9-5 I	SLR - Service light reset	Reset service	Live Parameters	Day
9-5 I	SLR - Service light reset	Reset service	Live Parameters	Hour
9-5 I	SLR - Service light reset	Reset service	Live Parameters	Minutes
9-5 I	SLR - Service light reset	Reset service	Live Parameters	Seconds
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	ECU Information	Part number
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	ECU Information	Hardware number
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	ECU Information	Software number
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	ECU Information	Programming date
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Battery voltage
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Fan control voltage
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Start enable 1
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Start enable 2
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Flame
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	system lock (too many starts/overheats)
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Coolant temperature 1
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Coolant temperature 2
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Flame temperature
9-5 I FL	Additional/Stationary Heater	DAH - Additional heater	Live Parameters	Heater power
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	VIN code
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Part number
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Hardware
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	ECU Information	Software version number
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	AC
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Cooling fan low speed
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Cooling fan high speed
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Ignition +15
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Engine running
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Evaporator temperature
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Battery voltage
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Coolant temperature
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	A/C pressure
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Left hand indicator relay
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Right hand indicator relay
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rear fog lights
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Front fog lights
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Main beam
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Dipped beam
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Hazard warning flashers
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rheostat
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Interior lighting

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Luggage space lighting
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Driver's door
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Passenger door
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Right rear door
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Left rear door
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Button for night panel
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Windscreen wiper intermittent setting
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Rear window heating
9-5 I FL	Body Control Module	DICE - Dashboard Integrated control electronics	Live Parameters	Fuel pressure when the engine was cut-off
9-5 I FL	Brake System	ABS/ESP	Adaptations	Steering angle calibration
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Wheel sensor LF
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Wheel sensor RF
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Wheel sensor LR
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Wheel sensor RR
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Steering angle sensor
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Yaw rate value
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Brake pressure sensor
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Lateral acceleration sensor
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Brake light switch
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Battery voltage
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Sensor fault output
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Engine speed
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Engine torque
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Max engine torque
9-5 I FL	Brake System	ABS/ESP	Live Parameters	Accelerator pedal position sensor
9-5 I FL	Climate Control	Climate control system	ECU Information	Part number
9-5 I FL	Climate Control	Climate control system	ECU Information	Hardware number
9-5 I FL	Climate Control	Climate control system	ECU Information	Hardware version
9-5 I FL	Climate Control	Climate control system	ECU Information	Software number
9-5 I FL	Climate Control	Climate control system	ECU Information	Software version number
9-5 I FL	Climate Control	Climate control system	ECU Information	System
9-5 I FL	Climate Control	Climate control system	ECU Information	Programming date
9-5 I FL	Climate Control	Climate control system	ECU Information	Diagnostic version
9-5 I FL	Climate Control	Climate control system	Live Parameters	Battery voltage
9-5 I FL	Climate Control	Climate control system	Live Parameters	Ignition +15
9-5 I FL	Climate Control	Climate control system	Live Parameters	Actual compartment temperature
9-5 I FL	Climate Control	Climate control system	Live Parameters	Mixed air temperature left
9-5 I FL	Climate Control	Climate control system	Live Parameters	Mixed air temperature right
9-5 I FL	Climate Control	Climate control system	Live Parameters	Sun sensor right cell
9-5 I FL	Climate Control	Climate control system	Live Parameters	Sun sensor back cell
9-5 I FL	Climate Control	Climate control system	Live Parameters	Sun sensor left cell
9-5 I FL	Climate Control	Climate control system	Live Parameters	Sun sensor top cell
9-5 I FL	Climate Control	Climate control system	Live Parameters	Sun sensor front cell
9-5 I FL	Climate Control	Climate control system	Live Parameters	Parking heater
9-5 I FL	Climate Control	Climate control system	Live Parameters	Seat temperature left
9-5 I FL	Climate Control	Climate control system	Live Parameters	Seat heating left

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Climate Control	Climate control system	Live Parameters	Seat temperature right
9-5 I FL	Climate Control	Climate control system	Live Parameters	Seat heating right
9-5 I FL	Climate Control	Climate control system	Live Parameters	Left heater flap position
9-5 I FL	Climate Control	Climate control system	Live Parameters	Right heater flap position
9-5 I FL	Climate Control	Climate control system	Live Parameters	Distribution flap position
9-5 I FL	Climate Control	Climate control system	Live Parameters	Recirculation
9-5 I FL	Climate Control	Climate control system	Live Parameters	Seat ventilation left
9-5 I FL	Climate Control	Climate control system	Live Parameters	Seat ventilation right
9-5 I FL	Climate Control	Climate control system	Live Parameters	Blower fan speed control
9-5 I FL	Climate Control	Climate control system	Live Parameters	Heat exchange valve
9-5 I FL	Climate Control	Climate control system	Live Parameters	Circulation pump
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	ECU Information	VIN code
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	ECU Information	Part number
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	ECU Information	Hardware
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	ECU Information	Software number
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Engine speed
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Battery voltage
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Coolant temperature
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Sensor, coolant temperature
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Desired idle speed
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Wheel speed, left front
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Accelerator pedal
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Accelerator pedal sensor 1
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Accelerator pedal sensor 2
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Throttle actuator
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Signal from throttle actuator
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Swirl actuator
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Signal from swirl actuator
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Turbo charge regulator valve
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Calculated mass air flow value
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Air mass meter
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	MAF (Mass Air Flow)
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Intake manifold pressure, target value
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Manifold absolute pressure
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	MAP sensor
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Atmospheric pressure
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Atmospheric pressure sensor
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	EGR-valve demand
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	EGR system regulation
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	IAT - Intake air temperature
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust particle filter pressure sensor
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust particle filter pressure
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust particle filter soot density
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust temperature 1
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust temperature Sensor 1
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust temperature 2

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Exhaust temperature Sensor 2
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel temperature
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel temp sensor
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Camshaft signal
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Injection angle
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Injection amount
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Target fuel pressure
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel pressure measured
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel pressure sensor
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel rail solenoid PWM
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel rail solenoid
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	High pressure pump solenoid PWM
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	High pressure pump solenoid
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fuel pump relay
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fan control output 1
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fan control output 2
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Fan control output 3
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Glow time
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Glow feedback
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Brake light switch
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	clutch connector
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Brake pedal switch
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	A/C pressure
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	A/C pressure sensor
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	AC input
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	AC output
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Oil level switch
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Engine oil quality
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Engine torque
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	ESP max engine torque
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Transmission max engine torque
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Ignition +15
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Live Parameters	Cruise Control
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Glowplug pre-operation
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Fuel pre heating
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Fuel pump relay
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	AC-relay
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Cooling fan low speed
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Cooling fan high speed
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Swirl control valve SCV
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	EGR valve
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Throttle actuator
9-5 I FL	Engine Diesel	1.9 TID Z19DTH EDC16	Tests	Turbo regulating valve
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Adaptations	Misfirecounter and knockcounter
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Adaptations	Misfirecounter and knockcounter
9-5 I FL	Engine Petrol	2.0 T Trionic T7	ECU Information	Vehicle identification VIN

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Petrol	2.3 T Trionic T7	ECU Information	Vehicle identification VIN
9-5 I FL	Engine Petrol	2.3 T Trionic T7	ECU Information	Part number
9-5 I FL	Engine Petrol	2.0 T Trionic T7	ECU Information	Part number
9-5 I FL	Engine Petrol	2.0 T Trionic T7	ECU Information	Hardware number
9-5 I FL	Engine Petrol	2.3 T Trionic T7	ECU Information	Hardware number
9-5 I FL	Engine Petrol	2.3 T Trionic T7	ECU Information	Hardware version
9-5 I FL	Engine Petrol	2.0 T Trionic T7	ECU Information	Hardware version
9-5 I FL	Engine Petrol	2.0 T Trionic T7	ECU Information	Software number
9-5 I FL	Engine Petrol	2.3 T Trionic T7	ECU Information	Software number
9-5 I FL	Engine Petrol	2.3 T Trionic T7	ECU Information	Software version
9-5 I FL	Engine Petrol	2.0 T Trionic T7	ECU Information	Software version
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Super charger bypass control solenoid valve
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Super charger bypass control solenoid valve
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Limp Home Solenoid Relay
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Limp Home Solenoid Relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Bleed valve
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Bleed valve
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Main relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Main relay
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel pump relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel pump relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Oxygen-sensor heater 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Oxygen-sensor heater 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Oxygen-sensor heater 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Oxygen-sensor heater 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	AC relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	AC relay
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Charge air control valve
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Charge air control valve
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Shut-off valve fuel tank ventilation
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Shut-off valve fuel tank ventilation
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Kick-down
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Kick-down
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	CHECK-ENGINE-lamp
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	CHECK-ENGINE-lamp
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	SHIFT UP lamp
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	SHIFT UP lamp
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control lamp
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control lamp
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel consumed since start
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel consumed since start
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine torque
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine torque
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Ignition angle

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Ignition angle
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Injection, final angle
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Injection, final angle
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Injection time
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Injection time
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Calculated gear position
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Calculated gear position
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	A/C in (bus from DICE)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	A/C in (bus from DICE)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Reverse gear (bus from DICE)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Reverse gear (bus from DICE)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control switch
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control switch
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	SET/+
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	SET/+
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	RES/-
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	RES/-
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake pedal-/clutch connector
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake pedal-/clutch connector
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Throttle position sensor 1
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Throttle position sensor 1
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Throttle position sensor 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Throttle position sensor 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator pedal sensor 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator pedal sensor 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator pedal sensor 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator pedal sensor 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine speed
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine speed
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Sensor intake manifold absolute pressure/barometric pressure
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Sensor intake manifold absolute pressure/barometric pressure
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Atmospheric absolute pressure
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Atmospheric absolute pressure
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Charge air absolute pressure
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Charge air absolute pressure
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel Tank Pressure Sensor
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel Tank Pressure Sensor
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	(HO2S) circuit - Sensor 1 - low voltage
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	(HO2S) circuit - Sensor 1 - low voltage
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda sensor 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda sensor 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knock sensor
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knock sensor
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cooling water temperature
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cooling water temperature
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air inlet temperature

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air inlet temperature
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed (wire from ABS/Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed (wire from ABS/Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed (Bus from main instrument unit)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed (Bus from main instrument unit)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Oxygen-sensor heater 1
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Oxygen-sensor heater 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Oxygen-sensor heater 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Oxygen-sensor heater 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Combustion signal, cylinders 1+2 / Bank 1
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Combustion signal, cylinders 1+2 / Bank 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Combustion signal, cylinders 3+4 / Bank 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Combustion signal, cylinders 3+4 / Bank 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Intake air mass
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Intake air mass
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/combustion
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/combustion
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Actual current (Bus from DICE)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Actual current (Bus from DICE)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Voltage to main relay
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Voltage to main relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Gear selector position (Bus from Transmission control module)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Gear selector position (Bus from Transmission control module)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake light
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake light
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Multiplicative adaptation
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Multiplicative adaptation
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Additive adaption
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Additive adaption
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Charge air adaption
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Charge air adaption
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.3
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.3
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Knocking, cyl.4
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Knocking, cyl.4
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring cylinder 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring cylinder 1
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring cylinder 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring cylinder 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring cylinder 3
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring cylinder 3
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Misfiring cylinder 4

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Misfiring cylinder 4
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Bleed adaption
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Bleed adaption
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda regulation
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda regulation
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass / Demanded Consumption
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass / Demanded Consumption
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Idle speed control
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Idle speed control
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Camshaft position synchronised
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Camshaft position synchronised
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Idle speed deviation from requested
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Idle speed deviation from requested
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control did not shut down
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control did not shut down
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cruise control was not used
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cruise control was not used
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake light was on
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake light was on
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Clutch or brake switch was on
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Clutch or brake switch was on
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed under 40 km/h (Bus from main instrument unit)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed under 40 km/h (Bus from main instrument unit)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed under 40 km/h (Wire from ABS/Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed under 40 km/h (Wire from ABS/Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Deceleration was too high
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Deceleration was too high
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	TCS was active (Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	TCS was active (Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Gear was disengaged
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Gear was disengaged
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Cancel was used
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Cancel was used
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	All inputs allows cruise control
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	All inputs allows cruise control
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	No brake light
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	No brake light
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	No clutch or brake switch
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	No clutch or brake switch
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed over 40 km/h (Bus from main instrument unit)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed over 40 km/h (Bus from main instrument unit)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Vehicle speed over 40 km/h (Wire from ABS/Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Vehicle speed over 40 km/h (Wire from ABS/Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	No deceleration
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	No deceleration
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	No Traction Control System active (Bus from TC/ABS)

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	No Traction Control System active (Bus from TC/ABS)
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Gear engaged
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Gear engaged
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Brake light and brake or clutch switch confirmed
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Brake light and brake or clutch switch confirmed
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Lambda regulation
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Lambda regulation
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Stored faultcode
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Stored faultcode
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine revolutions since start to few
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine revolutions since start to few
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel cut-off
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel cut-off
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load too high
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load too high
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load too low
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load too low
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine speed too low
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine speed too low
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Load transient and low coolant temperature
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Load transient and low coolant temperature
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Fuel cut-off
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Fuel cut-off
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Stored faultcode
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Stored faultcode
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Accelerator fully pressed during start
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Accelerator fully pressed during start
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Engine speed too high
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Engine speed too high
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/Combustion too high
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/Combustion too high
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	+15 Missing
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	+15 Missing
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Air mass/combustion calculated
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Air mass/combustion calculated
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Live Parameters	Max engine torque at current engine speed
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Live Parameters	Max engine torque at current engine speed
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	AC relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	AC relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Super charger bypass control solenoid valve
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Super charger bypass control solenoid valve
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Main relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Main relay
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Fuel pump relay
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Fuel pump relay
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Oxygen-sensor heater 1

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Oxygen-sensor heater 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Oxygen-sensor heater 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Oxygen-sensor heater 2
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Injector cylinder 1
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Injector cylinder 1
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Injector cylinder 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Injector cylinder 2
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Injector cylinder 3
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Injector cylinder 3
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Injector cylinder 4
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Injector cylinder 4
9-5 I FL	Engine Petrol	2.0 T Trionic T7	Tests	Shut-off valve fuel tank ventilation
9-5 I FL	Engine Petrol	2.3 T Trionic T7	Tests	Shut-off valve fuel tank ventilation
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Adaptations	Reset adaption
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Part number
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Hardware number
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software number
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Software version number
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	System
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Programming date
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	ECU Information	Diagnosis identity
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine speed signal from engine control module
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Speed signal, output
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gearbox input rpm
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Accelerator position (Bus from engine control module)
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine torque requested by driver
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Engine torque
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Transmission max engine torque
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Transmission Fluid Temperature Sensor Circuit
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Transmission fluid temperature
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Shift position
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear position switch A
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear position switch B
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear position switch C
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear position switch PA
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Brake light switch
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Kickdown
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sport switch
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Winter switch
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Sport lamp
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	TCS
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Winter lamp
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Check gearbox lamp
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	CHECK-ENGINE-lamp
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Gear shift program
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid S1

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid S2
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid S3
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid S4
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid S5
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid SLT
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid SLS
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Live Parameters	Solenoid SLU
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid S1
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid S2
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid S3
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid S4
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid S5
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid SLT
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid SLU
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Solenoid SLS
9-5 I FL	Gearbox / Automatic Transmission	Gearbox	Tests	Check gearbox lamp
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Part number
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Hardware number
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Software number
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Programming date
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	ECU Information	Diagnostic version
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Front load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Rear load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Headlamp levelling motor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Calibration value rear load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Left	Live Parameters	Calibration value front load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Part number
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Hardware number
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Software number
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Programming date
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	ECU Information	Diagnostic version
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Front load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Rear load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Headlamp levelling motor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Calibration value rear load angle sensor
9-5 I FL	Headlight	AHL - Automatic Headlamp Level - Right	Live Parameters	Calibration value front load angle sensor
9-5 I FL	Infotainment	Radio	ECU Information	Configuration
9-5 I FL	Infotainment	Radio	ECU Information	VIN code
9-5 I FL	Infotainment	Radio	ECU Information	Diagnosis identity
9-5 I FL	Infotainment	Radio	ECU Information	Software number 1
9-5 I FL	Infotainment	Radio	ECU Information	Software number 2
9-5 I FL	Infotainment	Radio	ECU Information	Part number
9-5 I FL	Infotainment	Radio	Live Parameters	Button pushed
9-5 I FL	Infotainment	Radio	Live Parameters	Radio band
9-5 I FL	Infotainment	Radio	Live Parameters	Married
9-5 I FL	Infotainment	Radio	Live Parameters	Theft protection

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Infotainment	Radio	Live Parameters	CDCR (CD Changer Rear)
9-5 I FL	Infotainment	Radio	Live Parameters	Audio volume
9-5 I FL	Infotainment	Radio	Live Parameters	Bass
9-5 I FL	Infotainment	Radio	Live Parameters	Midrange
9-5 I FL	Infotainment	Radio	Live Parameters	Treble
9-5 I FL	Infotainment	Radio	Live Parameters	Fader
9-5 I FL	Infotainment	Radio	Live Parameters	Balance
9-5 I FL	Infotainment	Radio	Live Parameters	Antenna signal
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Vehicle speed ABS
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Engine speed (Bus from Trionic)
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Coolant temp from engine control module
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level (Engine control unit)
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level, filtered
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level sensor
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel consumed (Bus from engine control unit)
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Odometer
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Trip meter
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Display lighting
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	LED Indicator
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Meter illumination
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Light indicator
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Indoor light sensor
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Indoor light intensity, Filtered
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Steering wheel buttons 1
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Steering wheel buttons 2
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Coolant level sensor
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Washer fluid level sensor
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Front lamp failure
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Button for night panel
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Pushbutton; fanfare horns
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Parking heater
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Month
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Day
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Hours
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Minutes
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Seconds
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Key not accepted message
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Control on steering wheels
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Rheostat, Filtered
9-5 I FL	Instrument / Dashboard	SID - Info display	Live Parameters	Outside temperature sensor
9-5 I FL	Instrument / Dashboard	MIU - Instrument	ECU Information	Part number
9-5 I FL	Instrument / Dashboard	MIU - Instrument	ECU Information	Hardware
9-5 I FL	Instrument / Dashboard	MIU - Instrument	ECU Information	Software number
9-5 I FL	Instrument / Dashboard	MIU - Instrument	ECU Information	Software version number
9-5 I FL	Instrument / Dashboard	MIU - Instrument	ECU Information	Programming date

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Instrument / Dashboard	MIU - Instrument	ECU Information	Diagnostic version
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Vehicle speed
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Engine speed
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Coolant temperature
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel level
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Fuel consumption
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Distance indicator
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Trip meter
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Display
9-5 I FL	Instrument / Dashboard	MIU - Instrument	Live Parameters	Button for night panel
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Ignition +15
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Hood switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Rear seat heater
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk key opening disarm switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Alarm sensors disable
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key unlock switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver door key lock switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Driver's door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Passenger door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk opening switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Central locking
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Trunk lock motor
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Brake pedal light
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Parking light, rear left
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Parking light, rear right
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Road speed signal
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics - Burglar alarm	Live Parameters	Outside temperature sensor
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Ignition +15
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Rear seat heater
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk key opening disarm switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Alarm sensors disable
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Driver door key unlock switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Driver door key lock switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Driver's door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Passenger door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Rear right door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Rear left door
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk opening switch
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Central locking
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Trunk lock motor
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Brake pedal light
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Parking light, rear left

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Parking light, rear right
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Road speed signal
9-5 I FL	Other	TWICE - Theft Warning Integrated Central Electronics	Live Parameters	Outside temperature sensor
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	Manufacturer item number
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	Hardware number
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	ECU version
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	Software number
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	Software version
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	System name
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	Programming date
9-5 I FL	Parking System	SPA - Parking assistance	ECU Information	Diagnosis identity
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Left outer distance sensor
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Left center distance sensor
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Right center distance sensor
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Right outer distance sensor
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Distance to target object
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Manual on/off (Bus from SID)
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Body type (Bus from TWICE)
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Reverse gear (bus from DICE)
9-5 I FL	Parking System	SPA - Parking assistance	Live Parameters	Status
9-5 I FL	Restraints	Airbag	ECU Information	VIN code
9-5 I FL	Restraints	Airbag	ECU Information	Part number
9-5 I FL	Restraints	Airbag	ECU Information	Hardware version
9-5 I FL	Restraints	Airbag	ECU Information	Software version number
9-5 I FL	Restraints	Airbag	ECU Information	System
9-5 I FL	Restraints	Airbag	ECU Information	Programming date
9-5 I FL	Restraints	Airbag	ECU Information	Diagnosis identity
9-5 I FL	Restraints	Airbag	Live Parameters	Passenger airbag
9-5 I FL	Restraints	Airbag	Live Parameters	Driver airbag, stage 1
9-5 I FL	Restraints	Airbag	Live Parameters	Driver airbag, stage 2
9-5 I FL	Restraints	Airbag	Live Parameters	Driver pretensioner
9-5 I FL	Restraints	Airbag	Live Parameters	Driver side airbag
9-5 I FL	Restraints	Airbag	Live Parameters	Airbag, passenger, stage 1
9-5 I FL	Restraints	Airbag	Live Parameters	Airbag, passenger, stage 2
9-5 I FL	Restraints	Airbag	Live Parameters	Passenger pretensioner
9-5 I FL	Restraints	Airbag	Live Parameters	Passenger side airbag
9-5 I FL	Restraints	Airbag	Live Parameters	Seat belt buckle,driver
9-5 I FL	Restraints	Airbag	Live Parameters	Seat belt buckle,passenger
9-5 I FL	Restraints	Airbag	Live Parameters	Driver seat position
9-5 I FL	Restraints	Airbag	Live Parameters	Ignition cycle counter airbag lamp
9-5 I FL	Restraints	Airbag	Live Parameters	SRS warning lamp
9-5 I FL	Restraints	Airbag	Live Parameters	Number of deployment times
9-5 I FL	Restraints	Airbag	ECU Information	VIN code
9-5 I FL	Restraints	Airbag	ECU Information	Part number
9-5 I FL	Restraints	Airbag	ECU Information	Hardware version
9-5 I FL	Restraints	Airbag	ECU Information	Software version number

Saab/Model	System	ECU	Feature	Definition
9-5 I FL	Restraints	Airbag	ECU Information	System
9-5 I FL	Restraints	Airbag	ECU Information	Programming date
9-5 I FL	Restraints	Airbag	ECU Information	Diagnosis identity
9-5 I FL	Restraints	Airbag	Live Parameters	Passenger airbag
9-5 I FL	Restraints	Airbag	Live Parameters	Driver airbag, stage 1
9-5 I FL	Restraints	Airbag	Live Parameters	Driver airbag, stage 2
9-5 I FL	Restraints	Airbag	Live Parameters	Driver pretensioner
9-5 I FL	Restraints	Airbag	Live Parameters	Driver side airbag
9-5 I FL	Restraints	Airbag	Live Parameters	Airbag, passenger, stage 1
9-5 I FL	Restraints	Airbag	Live Parameters	Airbag, passenger, stage 2
9-5 I FL	Restraints	Airbag	Live Parameters	Passenger pretensioner
9-5 I FL	Restraints	Airbag	Live Parameters	Passenger side airbag
9-5 I FL	Restraints	Airbag	Live Parameters	Seat belt buckle,driver
9-5 I FL	Restraints	Airbag	Live Parameters	Seat belt buckle,passenger
9-5 I FL	Restraints	Airbag	Live Parameters	Driver seat position
9-5 I FL	Restraints	Airbag	Live Parameters	Ignition cycle counter airbag lamp
9-5 I FL	Restraints	Airbag	Live Parameters	SRS warning lamp
9-5 II	SLR - Service light reset	Reset service - Engine	Adaptations	Engine oil data reset
9-5 II	SLR - Service light reset	Reset service - Engine	ECU Information	VIN
9-5 II	SLR - Service light reset	Reset service - Engine	ECU Information	System identification
9-5 II	SLR - Service light reset	Reset service - Engine	ECU Information	Engine type
900 II	Brake System	Bosch 5.4	Live Parameters	Front left wheel speed sensor
900 II	Brake System	Bosch 5.4	Live Parameters	Front right wheel speed sensor
900 II	Brake System	Bosch 5.4	Live Parameters	Rear left wheel speed sensor
900 II	Brake System	Bosch 5.4	Live Parameters	Rear right wheel speed sensor
900 II	Brake System	Bosch 5.4	Live Parameters	Brake light switch
900 II	Brake System	Bosch 5.4	Live Parameters	Sensor fault output
900 II	Brake System	Bosch 5.4	Live Parameters	Battery voltage
900 II	Brake System	Bosch 5.3	ECU Information	ECU ID
900 II	Brake System	Bosch 5.3	ECU Information	Part number
900 II	Brake System	Bosch 5.3	ECU Information	Hardware version
900 II	Brake System	Bosch 5.3	ECU Information	Software version number
900 II	Brake System	Bosch 5.3	Live Parameters	Front left wheel speed sensor
900 II	Brake System	Bosch 5.3	Live Parameters	Front right wheel speed sensor
900 II	Brake System	Bosch 5.3	Live Parameters	Rear left speed sensor
900 II	Brake System	Bosch 5.3	Live Parameters	Rear right speed sensor
900 II	Brake System	Bosch 5.3	Live Parameters	Brake light switch
900 II	Other	Remote control	ECU Information	ECU ID
900 II	Other	Remote control	ECU Information	Part number
900 II	Other	Remote control	ECU Information	Software number
900 II	Other	Remote control	ECU Information	Manufacturing date
900 II	Other	Remote control	Live Parameters	Programmed remote control
900 II	Other	Remote control	Live Parameters	Hood switch
900 II	Other	Remote control	Live Parameters	Trunk
900 II	Other	Remote control	Live Parameters	Active remote control button
900 II	Other	Remote control	Live Parameters	Alarm LED

Saab/Model	System	ECU	Feature	Definition
900 II	Other	Remote control	Live Parameters	Ignition status
9000	Other	Remote control	ECU Information	ECU ID
9000	Other	Remote control	ECU Information	Part number
9000	Other	Remote control	ECU Information	Software number
9000	Other	Remote control	ECU Information	Manufacturing date
9000	Other	Remote control	Live Parameters	Programmed remote control
9000	Other	Remote control	Live Parameters	Hood switch
9000	Other	Remote control	Live Parameters	Trunk
9000	Other	Remote control	Live Parameters	Active remote control button
9000	Other	Remote control	Live Parameters	Alarm LED
9000	Other	Remote control	Live Parameters	Ignition status
9000	Restraints	Airbag	ECU Information	Part number
9000	Restraints	Airbag	ECU Information	ECU ID
9000	Restraints	Airbag	Live Parameters	System voltage
9000	Restraints	Airbag	Live Parameters	System voltage
9000	Restraints	Airbag	Live Parameters	Airbag configuration
9000	Restraints	Airbag	Live Parameters	Pretensioner configuration
9000	Restraints	Airbag	Live Parameters	Check lamp